

myPhone



myPhone

3370



**DUAL SIM**  
technology

## ***FOR YOUR SAFETY***

First of all, read this simple guideline. Breaking the rules may be dangerous or illegal.

## ***LACK OF RISK***

Do not switch the phone on when phone use may cause interference or danger and when phone use is prohibited.

## ***MOST IMPORTANT – ROAD SAFETY***

Do not use hand – held phone while driving.

## ***INTERFERENCE***

All wireless handsets may get interference, which could affect performance.

## ***SWITCH OFF ZONES***

Do not use phone at a refuelling point.

Do not use near fuel or chemicals.

Do not use phone in aircraft. Wireless can cause interference in aircraft.

Switch the phone off near medical equipment.

## ***PROFRSSIONAL SERVICE***

Only qualified personnel may install or repair phone and phone equipment.

## ***BATERIES AND ACCESSORIES***

Use only approved batteries and accessories. Do not connect incompatible product.

## ***WATER – RESISTANCE***

Keep your telephone dry. Phone is not water – resistant.

## ***\*Attention:***

The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local myPhone dealer.

## **World Wide Web**

[www.myphone-mobile.com](http://www.myphone-mobile.com)


Version: 01150909

This quick start guide has been specially designed to guide you through the functions and features of your device.

## INSTALLING THE SIM CARD AND BATTERY

- Before installing SIM card, make sure that the phone is switched off and then remove the battery.

To remove back cover, push the back cover down and remove the cover off the phone (*Step 1*). Remove the battery by lifting battery from the finger grip (*Step 2*). Insert the SIM cards into **SIM1 card holder** and **SIM2 card holder**. Replace the battery and the back cover (*Step 3* and *Step 4*).

To switch on my**Phone 3370 sweet** headset press 



Step 1



Step 2



Step 3



Step 4

## CHARGING AND DISCHARGING

Your phone is powered by rechargeable battery.

Connect the charger to the AC wall socket (230 V wall socket). After that, connect the lead from the charger to the socket on the side of your phone. When battery icon located on phone screen is full, switch off the lead from the charger firstly and your phone an after doing that, switch off battery plug from 230 V outlet.

You can charge **myPhone 3370** using computer. Connect headset to your computer using USB device and charge.

## KEYBOARD LOCKING / UNLOCKING

To lock keyboard you should press



and



To unlock keyboard you should press



and



## WRITING AND SENDING TEXT MESSAGES

To write text message, select: **MENU** → **MESSAGES** → **SMS** → **WRITE MESSAGE**.

To sent written text message, select:

**OPTION → SIM1/SIM2 DONE**

- **SEND ONLY** – to send SMS;
- **SAVE AND SEND** – to save SMS in OUTBOX and to send SMS;
- **SAVE** – to save SMS message;
- **SEND TO MANY** – to send SMS to more than one recipient;
- **SEND TO GROUP** – to send SMS to one of selected Group.

## SAVING NAMES AND PHONE NUMBERS

You can save names and phone numbers in the phone memory and in the SIM cards memory.

To add new contact, select:

**MENU → PHONEBOOK → ADD NEW CONTACT**

and after that, choose **To SIM1** or **To SIM2** or **To Phone**.

Write all information about new contact:


- *Name*
- *Number*


When you choose **To Phone**, you can add:

- *Name*
- *Number*
- *Home number*
- *Company name*
- *Email address*
- *Office number*
- *Fax number*
- *Birthday*
- *Associate picture* (From file or from 4 basic pictures)





## MAKING A CALL

To make a call, type the phone number, including the area code, than press  (SIM 1 or SIM 2) to call number.


To make a call using SIM card, select **NAME**, select the correct contact data, and press ( SIM 1 or SIM 2) to make a call.

## ANSWERING THE INCOMING CALL

Press  to answer the incoming call and press  to end the call.


Pres  to reject the incoming call.

## HOW TO CHECK YOUR CALLS?

Press  to check your calls.

## MEMORY CARD

To insert the memory card into your phone look at picture hereunder:

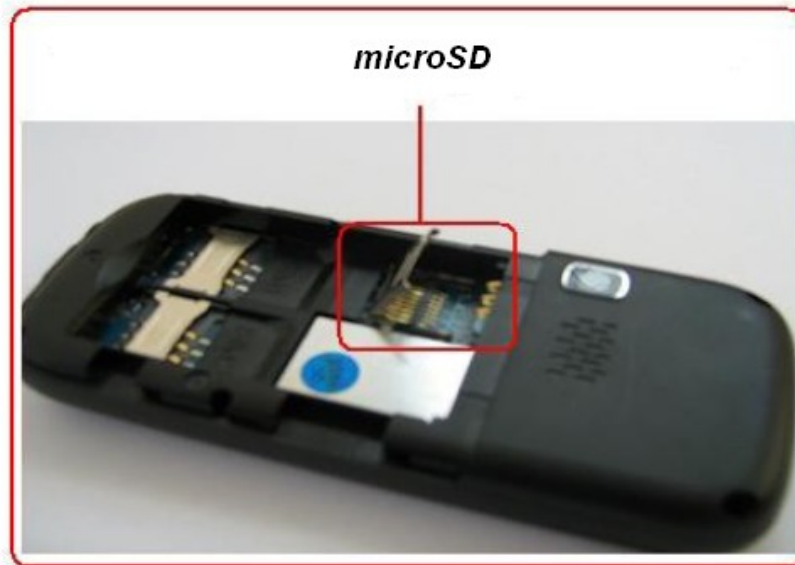

- 1.** To remove back cover, push the back cover down and remove the cover off the phone.
- 2.** Remove the battery by lifting battery from the finger grip.
- 3.** Insert microSD card.
- 4.** Replace the battery and the back cover.

## MORE INFORMATION

- Main code to restore settings: **1122** or **1234**.
- Web page: [www.myphone-mobile.com](http://www.myphone-mobile.com)
- Technical support number: **(+ 48 71) 717 74 00**
- Technical support email : [support@myphone.pl](mailto:support@myphone.pl)



## DOOR – TO – DOOR WARRANTY

Our assortment contains high quality products. Your phone is a product of superior design and craftsmanship, and should be treated with care. **myPhone** assures 24 – months **door – to – door** warranty for myphone headset only. If any of item is not working properly, send it via courier to our nearest service facility (at the consignee's cost). Repaired item is send back to our customer at the consignor's cost.

Door – to – door warranty is not pertains to consumable parts and mobile accessories.

## WARRANTY PERIOD

The warranty period starts at the time of Product's original purchase by the first end-user.

The Product may consist of several different parts and different parts may be covered by a different warranty period.

Warranty periods:

- Twenty four (24) months for the mobile phone.
- Six (6) months for the following consumable parts and

accessories: batteries, chargers, headphones, USB wire.

## COMPLAINT PROCEDURE

**1.** Firstly, contact with **myPhone** technical support via phone call or via email.

➤ Technical support phone:

**(+ 48 71) 717 74 00**

➤ Technical support email :

[support@myphone.pl](mailto:support@myphone.pl)

**2.** Technical support verifies complaint declaration. The RMA number is given to each complaint declaration.

**3.** Preparing and sending the phone and all needed documents.

**4.** Confirmation about received complaint by technical support.

**5.** Confirmation status is available to control on the web page:  
[www.myphone-mobile.com](http://www.myphone-mobile.com)

**6.** Accomplishment complaint procedure and send accessories back to client.

## ACCESSORIES

myPhone 3370 sweet accessories:

- *Car charger*
- *AC charger*
- *Memory card - microSD*
- *HF headphones*
- *Battery*

## SPARE PARTS

- *Keyboard membrane*
- *Vertical case*
- *Horizontal case*
- *Feeding connector*
- *Main board*
- *Display unit*
- *Keyboard*
- *Case*
- *Microphone*
- *Hands' free*



## myPhone 3370 sweet

<b><i>Dimensions, weight</i></b>	110 x 46 x 15 mm, 58 g
<b><i>Display unit</i></b>	1,8", 128 x 160 pixels,
<b><i>Display unit colors</i></b>	65 thousands colors
<b><i>Phonebook memory</i></b>	500 items
<b><i>Battery capacity</i></b>	850 mAh
<b><i>Talk time</i></b>	base on network signal
<b><i>Standby time</i></b>	base on network signal
<b><i>Messages</i></b>	SMS, MMS
<b><i>Multimedia</i></b>	WAP, Radio, MP3 player Dictaphone, Games,
<b><i>Sound formats</i></b>	midi, mp3
<b><i>Camera</i></b>	VGA 0,3 Mpx; 640 x 480
<b><i>Picture formats</i></b>	bmp, gif, jpg
<b><i>Video resolution</i></b>	178 x 144
<b><i>Movie formats</i></b>	3gp, avi, mpeg4
<b><i>Additional functions</i></b>	Alarm clock, Calendar, Calculator, Organizer, Stopwatch, Unit Converter, Vibra, Hands free set, Currency Converter, Torch.







**myPhone**

[www.myphone-mobile.com](http://www.myphone-mobile.com)