

Manual de utilizare
Telefon mobil GSM
Model Q1 G3T



Cuprins

1. Masuri de siguranta	5
1.1. PTR. SIGURANAT DVS	5
1.2. MASURI DE SECURITATE	6
1.3. INTRETINERE	6
2. Telefonul Dvs.	7
3. Utilizare	9
3.1. BATERIA	9
3.2. INSTALAREA BATERIEI	9
3.3. INCARCAREA BATERIEI	10
3.4. CONECTAREA LA RETEA	10
3.5. INTRODUCEREA / SCOATEREA CARTELEI SIM	11
3.6. INTRODUCEREA / SCOATEREA CARDULUI DE MEMORIE	11
3.7. PORNIRE / OPRIRE TELEFON	12
3.8. COD PIN SI COD PUK	12
3.9. BLOCARE TELEFON	13
3.10. BLOCARE TASTATURA	13
3.11. CONECTAREA LA RETEA	13
4. Functii de baza	13
4.1. EFECTUAREA UNUI APEL	13
4.2. EFECTUAREA UNUI APEL CATRE NUMAR FIX	13
4.3. EFECTUAREA UNUI APEL CATRE NUMAR FIX+EXTENSIE	14
4.4. APELURI INTERNATIONALE	14
4.5. APELAREA UNUI NUMAR DIN REGISTRU APEL	14
4.6. APELURI DE URGENTA	14
4.7. PRELUAREA UNUI APEL	14
4.8. REGISTRU APEL	15
4.9. OPTIUNI APEL	15
5. Folosirea meniurilor	16
5.1. ACCESAREA UNEI FUNCTII DIN MENU	16
5.2. PARASIREA UNEI FUNCTII DIN MENU	16
5.3. LISTA FUNCTIILOR DIN MENU	16
6. Centru de apel	18
6.1. REGISTRU APEL	18
6.2. APEL VIDEO	18
6.3. SETARI APELURI	18
7. Agenda	19
7.1. ADAUGAREA UNUI COTACT NOU	19
7.2. CAUTAREA UNUI CONTACT	19

7.3. OPTIUNI	19
8. Mesaje	20
8.1. CREAREA UNUI MESAJ NOU SMS	20
8.2. CREAREA UNUI MESAJ NOU MMS	20
9. Email	21
10. Setari	21
10.1. SETARI DUAL SIM	21
10.2. SETARI TELEFON	21
10.3. SETARI RETEA	22
10.4. SETARI SECURITATE	22
10.5. CONECTIVITATE	23
10.6. REINITIALIZARE SETARI IMPLICITE	24
11. Multimedia	25
11.1. CAMERA / INREGISTRARE VIDEO HD	25
11.2. VIZUALIZARE IMAGINI	26
11.3. REDARE VIDEO	26
11.4. EDITOR FOTOGRAFII	26
11.5. REDARE AUDIO	26
11.6. INREGISTRARE SUNETE	27
11.7. RADIO FM	27
11.8. EXPUNERE DIAPOZITIVE	27
12. Administrator fisiere	27
13. Organizator	28
13.1. CALENDAR	28
13.2. LISTA DE SARCINI	28
13.3. ALARMA	28
13.4. ORA PE GLOB	28
13.5. NOTE	29
13.6. SINCRONIZARE	29
13.7. CALCULATOR	29
13.8. CONVERTOR VALUTA	29
13.9. CITITOR CARTE ELECTRONICA (E-BOOK)	29
14. Servicii	30
14.1. SERVICII OPERATOR	30
14.2. SERVICII INTERNET	30
14.3. MANAGER LICENTA	31
15. Profile utilizator	31
16. Jocuri	33
16.1. APLICATII JAVA	33
17. eBUDDY	33
18. SNAPTU	34
19. BOLT	34

20. ALLVIEW STORE	34
21. Metode de introducere	35
21.1. SCHIMBAREA METODEI DE INTRODUCERE	35
21.2. INTRODUCERE (ABC SI ABC)	35
21.3. INTRODUCERE NUMERE	35
21.4. INTRODUCERE SIMBOLURI	35

1. MASURI DE SIGURANTA

1.1. Ptr. Siguranta dvs.



Nu uitati ca trebuie sa va supuneti cerintelor legale si restrictiilor locale cind folositi telefonul, de exemplu, in avion, benzinarii, spitale sau cind conduceti.



Intotdeauna folositi sistemul de "Maini libere" cind conduceti. Prima grija cind conduceti este siguranta rutiera.



Conform legii, nu folositi telefonul in benzinarii linga combustibili sau chimicale.



Telefoanele mobile pot interfera cu buna functionare a aparatelor medicala cum ar fi protezele auditive sau stimuloare cardiace. Pastrati cel putin 20cm intre telefon si stimuloarele cardiace. Cind folositi telefonul mobil tineti-l la urechea care este cea mai departata de stimulatorul cardiac. Pentru mai multe informatii intrebati doctorul dvs.



Toate telefoanele fara fir pot interfera intre ele, ceea ce le poate afecta performantele. Telefonul poate cauza interferente in vecinatatea unui Televizor, Radio sau PC.



Respectati tensiunea de alimentare (V) specificata pe incarcator. O tensiune de alimentare mai mare poate defecta incarcatorul. Dupa ce ati incarcat telefonul, scoateti incarcatorul din priza.



Numai persoanele autorizate pot repara acest produs.



Cind conectati cu un alt produs, cititi inainte instructiunile de folosire. Nu conectati cu produse incompatibile.



Folositi numai accesorii si baterii aprobate de producator. Nu conectati telefonul cu produse care nu sint aprobate de producator.

1.2. Masuri de securitate

Inainte de a efectua sau prelua un apel, tineti cont de legile in vigoare cu privinta la folosirea unui telefon mobil.

Siguranta in trafic

Acordati atentie sigurantei in trafic. Nu folositi telefonul mobil in timp ce conduceti. Opriti masina inainte de folosirea telefonului mobil.

Siguranta in zbor

Opriti telefonul mobil inainte de decolarea unui avion ptr. a evita interferentele cu sistemele de comunicatie ale avionului. Folosirea telefonului mobil inainte de decolarea avionului se poate face numai cu permisiunea personalului insotitor in concordanta cu regulile de siguranta.

Siguranta mediului inconjurator

Nu folositi telefonul mobil linga echipamente electronice de precizie. Interferentele radio pot cauza functionarea necorespunzatoare a acestor echipamente. Telefonul mobil poate interfera cu echipamentele medicale cum ar fi protezele auditive sau stimulatorile cardiace.

Nu folositi telefonul in apropierea unei atmosfere periculoase. Tineti cont de restrictiile privind folosirea telefoanelor mobile.

1.3. Intretinere

Instructiuni pentru baterie

Cind bateria este descarcata sau telefonul se opreste singur, va rugam incarcati bateria. Incarcati bateria complet ptr. primele incarcari. Daca nu folositi telefonul o perioada mai mare de timp, scoateti bateria din aparat. Supraincarcarea va scurta durata de viata a bateriei.

Nu expuneti telefonul si accesoriile la temperaturi prea joase sau prea inalte. Nu expuneti bateria la temperaturi mai mari de +40°C.

Nu folositi baterii defecte. Nu expuneti telefonul mobil la razele directe ale soarelui sau in zone cu temperaturi ridicate. Temperaturile inalte pot scurta viata aparatelor electronice.

Nu aruncati bateria in foc sau la intamplare. Returnati bateriile defecte la furnizor sau la centrele speciale ptr.colectarea bateriilor defecte. Folositi aceste reguli ptr. a proteja produsul, nu lasati la indemana copiilor. Pastrati produsul uscat. Nu expuneti telefonul sau accesoriile la lichid sau mediu umed.

Nu scurtcircuitati bateria deoarece poate provoca caldura excesiva ce poate duce la un incendiu.

Nu incercati sa dezmembrati telefonul sau bateria. Interventii neautorizate asupra telefonului pot duce la deteriorarea acestuia.

Evitati scurgerea de lichid in telefon.

Folositi accesoriile originale. Folosirea accesoriilor neautorizate poate afecta performantele telefonului.

Nota: Performantele telefonului depend de operatorul local de telefonie si de modul de folosire al acestuia. Nu sintem responsabili de folosirea necorespunzatoare a acestuia.

Va rugam sa cititi cu atentie aceste instructiuni de folosire. Incalcarea acestor instructiuni pot cauza pericol sau incalcarea legilor.

2. TELEFONUL DVS.

Functii de baza:



- | | | | |
|---|--------------------|----|----------------------|
| 1 | Taste Volum | 6 | Tasta Pornit/Oprit |
| 2 | Tasta Deplasare/OK | 7 | Tasta Revenire |
| 3 | Tasta Meniu | 8 | Tasta Inchidere Apel |
| 4 | Tasta Apel | 9 | Mufa casti |
| 5 | Tastatura QWERTY | 10 | Mufa Incarcare / USB |

Functii taste

Tasta	Descrierea
[Tasta apel]	Apasati ptr. a accesa urmatoarele operatii: Deschidere registru apel Apelare contact cind un nume/numar este activ
[Tasta Meniu]	Apasati ptr. a accesa o lista de obtiuni valabile ptr. ecranul curent. Selectati "OK" in ferestrele de confirmare.
[Tasta Inchidere apel]	In timpul unui apel, apasati ptr. a inchide convorbirea. Cind nu sinteti in timpul unui apel: Apasati lung ptr. a porni/opri telefonul. Apasati pt. a reveni in meniu asteptare.
[Tasta Revenire]	Apasati ptr. a va intoarce in meniul anterior. Selectati "Nu" in ferestrele de confirmare.
[Tasta deplasare]	Apasati aceasta tasta in meniul asteptare ptr. a intra in meniul principal . Realizeaza functia afisata in coltul stanga jos al ecranului. Deplasati usor degetul in directia sus/jos/stanga/dreapta pe aceasta tasta ptr a defila prin meniu.

3. UTILIZARE

 
3.1. Bateria

Bateria initial este incarcata partial si poate fi folosita dupa desfacerea ambalajului .

3.2. Instalarea bateriei

Ptr. scoatere:


- A. Impingeti in jos capacul din spate al bateriei;
- B. Ridicati bateria asa cum este infatisat in figura;
- C. Scoateti bateria.

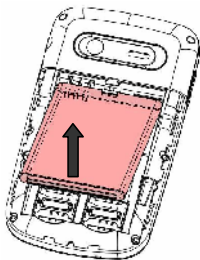

Avertizare: Asigurati-va ca telefonul este oprit inainte de a scoate cartela SIM sau bateria, in caz contrar cartela SIM poate fi afectata.

Ptr. instalare:

 - A. Aliniati contactele bateriei cu conectorii corespunzatori de pe compartimentul bateriei, apasati usor bateria in jos, folosind degetul, apoi apasati pe celalalt capat pentru a instala bateria.
- B. Asezati capacul spate al bateriei si impingeti usor pina cind ajunge in locasul sau.

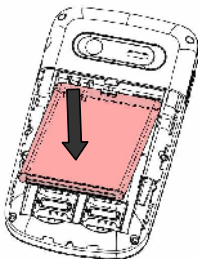

3.3. Incarcarea bateriei

În timpul încărcării, indicatorul bateriei de pe ecranul telefonului vă indică încărcarea bateriei. Dacă telefonul este oprit la conectarea încărcătorului, numai indicatorul de încărcare va apărea pe ecran indicând încărcarea bateriei. Dacă telefonul este folosit în timp ce bateria este descărcată, telefonul se poate stinge iar la conectarea încărcătorului, indicatorul de încărcare va apărea pe ecran după un timp.

Când indicatorul de încărcare baterie arată baterie plină și bateria de pe ecran nu mai oscilează, înseamnă că bateria s-a încărcat complet. Procesul de încărcare completă a bateriei durează aprox. 2.5 ore. Este normal ca telefonul, bateria și încărcătorul să se încălzească în timpul procesului de încărcare. Când încărcarea este completă, deconectați telefonul și încărcătorul de la priză de tensiune AC.

Nota: Bateria trebuie încărcată în spații bine ventilate cu temperatura înconjurătoare între -10°C și 55°C și folosind numai încărcătorul original furnizat de producător. Folosirea unui încărcător neaprobabil de producător poate cauza diverse pericole și de asemenea conduce la pierderea garanției oferite de producător. Dacă temperatura înconjurătoare este prea mare sau prea mică, telefonul va avertiza automat și nu va mai încărca bateria prevenind astfel deteriorarea acesteia.

3.4. Conectarea la rețeaua unui operator

Cartela SIM

Trebuie să introduceți o cartelă SIM valabilă (Subscriber Identity

 
Module) înainte de folosirea telefonului.

Toate informațiile legate de conectarea la rețeaua operatorului respectiv sunt stocate în circuitul cartelei SIM, inclusiv numele și numerele din agenda telefonică și mesajele scurte SMS (Short Message System). Pentru a evita deteriorarea sau pierderea informațiilor din cartela SIM este recomandat să evitați atingerea contactelor metalice și păstrarea cartelei SIM departe de curentul electric și cimpuri magnetice.

3.5. Introducerea și scoaterea cartelei SIM

Opriti telefonul, scoateti bateria și încărcătorul dacă este conectat. Aparatul are loc pentru două cartele SIM, și este capabil să opereze aceste SIM-uri în așteptare. Cartela introdusă în slotul 1 este SIM 1, cartela introdusă în slotul 2 este SIM 2. Asigurați-vă că zona de contact de pe cartela este orientată către conectorii telefonului și colțul țesit este orientat conform cu indicatorul, apoi introduceți cartela SIM.


Când vreți să scoateți cartela SIM, vă rugăm întâi opriti telefonul, scoateți bateria apoi trageți cartela SIM direct spre exterior.

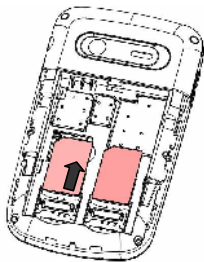

3.6. Introducerea și scoaterea cardului de memorie

Opriti telefonul, scoateți bateria și încărcătorul dacă este conectat. Întoarceți cardul cu partea metalică în jos și introduceți în lacășul de card de memorie.

 Când scoateți cardul, trageți-l spre exterior, așa ca în figura de mai jos.

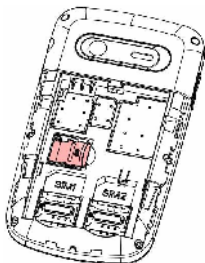

3.7. Pornirea / oprirea telefonului

Pentru a porni telefonul, va rugam sa tineti apasata tasta inchidere/anulare. Ecranul telefonului va arata un mesaj prin care sinteti rugat sa introduceti codul telefonului si/sau codul PIN in cazul in care au fost activate de dvs. Dupa introducerea corecta a codurilor cerute, telefonul va cauta si se va conecta la reseaua GSM (Global System for Mobile Communication) corespunzatoare cartei SIM introdusa.

Pentru a opri telefonul, va rugam sa tineti apasata tasta inchidere/anulare.

3.8. Codul PIN si codul PUK

Pentru a preveni folosirea telefonului dvs. de catre persoane neautorizate, puteti activa codul PIN (Personal Identification Number). Daca activati aceasta obtiune, trebuie sa introduceti codul PIN de fiecare data cind porniti telefonul.

Va rugam sa tineti apasata tasta inchidere/anulare pentru a porni telefonul. Introduceti codul PIN, folositi tasta rapida dreapta ptr. a sterge introducerea gresita si apoi tasta rapida stanga (OK) ptr. confirmarea codului PIN. De exemplu, daca aveti codul PIN 1234, trebuie sa apasati urmatoarele taste: 1 2 3 4 "OK"

Daca ati introdus de 3 ori gresit codul PIN, cartela SIM se va bloca automat si telefonul va cere codul PUK (Personal Unlock Code).

Nota: Codul PIN standard setat de operatorul dvs. de retea este un cod de 4-8 cifre si il gasiti in instructiunile de folosire ale cartei SIM. Dupa activarea cartei SIM schimbati codul PIN cu un cod personal. Codul PUK va este furnizat de operatorul de retea.

3.9. Blocarea telefonului

Codul de blocare al telefonului previne folosirea neautorizata a telefonului dvs. Codul de blocare al telefonului setat initial de producator este 1122. Puteti schimba acest cod in orice alt cod personal de 4-8 cifre.

Daca functia de blocare a telefonului este activata, trebuie sa introduceti codul de blocare al telefonului de fiecare data cind porniti telefonul sau cind acesta intra in modul economic.

3.10. Blocarea tastaturii

Ptr. deblocarea tastaturii, apasati tasta OK apoi * consecutiv. In modul de asteptare, apasati tasta OK apoi * pentru a bloca tastatura.

Daca functia de blocare automata a tastaturii este activata si telefonul este in modul de asteptare, dupa o perioada scurta de timp, tastatura se va bloca automat.

Nota: Cind tastatura este blocata puteti apasa tasta Apelare ptr. a prelua un apel sau ptr. a efectua un apel de urgenta.

3.11. Conectarea la retea

Dupa ce codul PIN a fost introdus corect, telefonul va cauta automat reteaua GSM corespunzatoare operatorului dvs. Odata ce conexiunea a fost stabilita, numele operatorului dvs. GSM va fi afisat in centru ecranului. In acest moment telefonul dvs. este conectat la reteaua GSM a operatorului dvs.

Nota: Daca pe ecran apare mesajul "Numai numere urgente / Urgenta", asta inseamna ca sinteti in afara ariei de acoperire a operatorului dvs. sau cartela dvs. nu a fost inregistrata dar puteti totusi efectua apeluri de urgenta datorita semnalului afisat.

4. FUNCTII DE BAZA

4.1. Efectuarea unui apel

Cind numele operatorului dvs. apare pe ecran, puteti efectua sau primi apeluri. Nivelul semnalului retelei este afisat in coltul din stanga sus (cind sint afisate 5 linii, semnalul este maxim).

Calitatea apelurilor efectuate sau primite este influentata de obstacolele intalnite in preajma telefonului.

4.2. Efectuarea apelurilor catre un numar fix

Introduceti numarul de telefon dorit apoi apasati Tasta Apelare ptr. a efectua apelul. Daca doriti sa schimbati numarul apelat, apasati Tasta rapida dreapta ("Sterge") si stergeti cifrele introduse. O anumatie de apelare va aparea pe ecran in timpul apelului. Informatii despre apel

vor apare pe ecran in timpul si imediat dupa terminarea apelului.

Puteti introduce si apela un numar de fix dupa cum urmeaza:

(Prefixul orasului) (Numar de telefon) (Tasta apelare)

4.3. Efectuarea apelurilor catre un numar fix cu extensie

Unele interioare ale unor numere fixe nu pot fi apelate direct prin simpla apasare a numerelor, trebuie sa tastati mai intai numarul de telefon fix, apoi tineti apasata tasta * pina cind apare simbolul "P", dupa care tastati extensia apoi Tasta de apelare.

Puteti introduce si apela un numar de fix cu extensie dupa cum urmeaza:

(Prefixul orasului) (Numar de telefon) "P" (Tasta apelare)

4.4. Efectuarea apelurilor internationale

Pentru efectuarea apelurilor internationale, tineti apasata tasta * pina cind simbolul "+" apare pe ecran, tastati apoi codul tarii unde vreti sa sunati, urmat de numarul de telefon dorit si Tasta de apelare.

Puteti introduce si apela un numar international dupa cum urmeaza:

(+) (Codul tarii) (Numar de telefon) (Tasta Apelare)

Codurile tarilor sint de exemplu: Germania 49, anglia 44, SUEZIA 46, India 91, etc.

Cind efectuati un apel international catre un numar fix, cifra "0" aflata inaintea codului de oras nu se tasteaza.

4.5. Apelarea unui numar din Registrul apel

Toate numerele de telefon ptr. apelurile efectuate sau primite sint memorate in Registrul Apel. Ultimile apeluri efectuate, primite si pierdute vor fi memorate in Registrul Apel. Cind lista de apeluri din Registrul apel este plina, numerele cele mai vechi vor fi sterse automat. Pentru a vedea numerele din lista de apeluri efectuate, primite sau pierdute, in modul economic apasati Tasta Apelare o data. Toate numerele memorate in Registrul apel pot fi apelate apasind Tasta Apelare. Cind lista este afisata, apasati tasta "OK" pentru a vedea detalii legate de anel numar, apoi apasati "Obtiuni" ptr. a memora sau sterge acel numar.

4.6. Apeluri de urgenta

Atata timp cit sinteti in aria de acoperire a unui operator GSM, puteti apela intotdeauna numerele de urgenta. Daca operatorul dvs de retea nu va furnizeaza servicii Roaming in zona dvs., ecranul va afisa "Numai apeluri de urgenta / Urgenta", ptr. a va informa ca numai apelurile de urgenta pot fi efectuate. Daca sinteti in aria unui operator GSM, de asemenea puteti efectua apeluri de urgenta fara a avea o cartela SIM.

4.7. Preluarea unui apel

Un apel primit poate fi preluat doar prin simpla apasare a Tastei de

Apelare. Daca aveti conectat un dispozitiv "Maini libere", apasati tasta de pe microfonul dispozitivului maini libere ptr. a prelua apelul sau activati functia "Raspundeti automat" ptr. a putea prelua apelul fara a mai apasa nici o tasta. Daca este activata functia "Raspundeti cu orice tasta", atunci puteti prelua apelul prin apasarea oricarei taste, cu exceptia Tastei Inchidere/Anulare si Tasta Rapida Dreapta.

4.8. Registru apel

Telefonul dvs. poate memora de asemenea informatii despre ultimile apeluri pierdute, primite sau efectuate, durata ultimului apel, durata totala apeluri primite, durata totala apeluri efectuate.

4.9. Optiuni apel

In timpul unui apel apasind tasta de Meniu "Obtiuni", puteti accesa Obtiuni apel. Apasati tasta de intoarcere "H-free" ptr. a activa difuzorul. Ptr. a dezactiva difuzorul, apasati tasta de intoarcere "H-held" cind acesta este activat.

Meniul Obtiuni apeluri poate fi accesat numai in timpul unui apel. Functiile de Apel in asteptare, Apel retinut si Conferinta au nevoie de suportul operatorului, va rugam sa contactati operatorul dvs. gsm ptr. mai multe detalii.

In meniul Obtiuni apel puteti accesa urmatoarele functii:

Apel retinut: Puneti in asteptare apelul activ ptr. a raspunde unui alt apel.

Terminare apel: Terminati apelul activ.

Apel nou: Accesati interfata de initiere apel nou.

Mesaje: Accesati meniul Mesaje SMS.

Inregistrare audio: Inregistrati apelul curent.

Sunet fundal: setati sunetul de fundal ptr. apelul curent.

Fara sunet: Cind selectati "Fara sunet" in timp ce primiti un apel, soneria va fi oprită.

DTMF: Activarea/dezactivarea tonurilor DTMF.

Conferinta*: Accesati meniul Conferinta. Urmand instructiunile puteti accesa urmatoarele functii: acceptare apel in asteptare, adaugare apel in asteptare in cadrul conferintei, scoaterea in privat a unui apel din conferinta fara a inchide conferinta, conectarea unui apel din conferinta cu un alt apel din conferinta in privat, pastrarea unui apel din conferinta si parasirea celorlalte apeluri din conferinta.

Nota: Meniul marcat cu * poate aparea in anumite conditii numai. Ptr. meniu Conferinta este posibil sa fie necesara accesarea unui serviciu suplimentar oferit de operatorul dvs. gsm.

5. FOLOSIREA MENIURILOR

Telefonul va ofera o gama larga de functii care va permit sa le adaptati nevoilor dvs. Aceste functii sint grupate in Meniuri si Submeniuri care pot fi accesate deruland prin meniu sau accesind scurtatura corespunzatoare.

5.1. Accesarea unei functii din meniu

1. Apasati tasta OK in modul asteptare.
2. Derulati prin meniu cu ajutorul Tastei Deplasare.
3. Apasati Tasta Meniu ptr. a accesa meniul principal. Puteti accesa Submeniurile din meniul principal cu ajutorul Tastei Deplasare.
4. Apasati Tasta Meniu ptr. a intra in Submeniuri.

5.2. Parasirea unei functii din meniu

Puteti sa reveniti in meniul anterior apasand tasta Inapoi.

5.3. Lista functiilor din meniu

- | | |
|--------------------------|-------------------------------------|
| 1 Centru de apel | 5 Setari |
| 1-1 Registru apel | 5-1 Setari SIM dublu |
| 1-2 Apel video | 5-2 Setari telefon |
| 1-3 Setari apeluri | 5-3 Setari retea |
| | 5-4 Setari securitate |
| 2 Agenda | 5-5 Conectivitate |
| 2-1 Adaugare contact nou | 5-6 Reinitializare setari implicite |
| 2-2 Cautare contact nou | |
| 2-3 Optiuni | |
| | 6 Multimedia |
| 3 Mesaje | 6-1 Camera |
| 3-1 Scrieti un mesaj | 6-2 Vizualizare imagini |
| 3-2 Mesaje Primite | 6-3 Redare audio |
| 3-3 Schite | 6-4 Redare video |
| 3-4 Casuta iesiri | 6-5 Radio FM |
| 3-5 Mesaje Trimise | 6-6 Inregistrare sunete |
| 3-6 Stergere mesaje | 6-7 Expunere diapozitive |
| 3-7 Difuzare mesaj | 6-8 Editor fotografii |
| 3-8 Sablon | |
| 3-9 Setari mesaje | 7 Administrator fisiere |
| 4 Email | |

Romana

8 Organizator	10-2 Intalnire
8-1 Lista de sarcini	10-3 In aer liber
8-2 Calculator	10-4 In interior
8-3 Calendar	10-5 Silentios
8-4 Cititor carte electronica	10-6 Casti
8-5 Note	10-7 Bluetooth
8-6 Alarma	
8-7 Ora pe glob	11 Jocuri
8-8 Convertor valuta	11-1 JAVA
8-9 Sincronizare	11-3 Bubble
9 Servicii	12 eBuddy
9-1 Servicii operator	
9-2 Serviciu internet	13 Snaptu
9-9 Manager Licenta	
10 Profile utilizator	14 Bolt
10-1 General	15 Allview Store

6. CENTRU DE APEL

6.1. Registru apel

1. Selectati Meniu, Centru de apel apoi Registru apel SIM 1 sau SIM 2.
2. Selectati lista de apeluri pe care doriti sa o vedeti din Apeluri Nepreluuate, Apeluri Efectuate, Apeluri Receptionate.
3. Puteti selecta de asemenea Timp apel, Costuri apel, Contoare mesaje, Contoare GPRS.

6.2. Apel video

1. Selectati Meniu, Centru de apel apoi Apel Video.
2. Selectati Obtiuni ptr. a efectua apel video, Selecta camera dorita, Seta Mod Nocturn, Setari Apel Video sau Setari Avansate.

6.3. Setari apeluri

1. Selectati Meniu, Centru de apel apoi Setari apeluri.
2. Selectati SIM-ul ptr. care doriti sa setati apelurile sau Mai Multe Setari.
3. In meniul Setari Apeluri puteti selecta Apel in Asteptare, Directionare Apel, Restrictionare Apel si puteti opta ptr. activare/dezactivare sau verificare stare.
4. In meniul Setari Avansate puteti seta Lista neagra, Reapelare Automata, Sunet fundal, Afisare Contor de Timp, Reamintire Contoar de Timp, Inchidere automata sau Respingere cu SMS.

7. AGENDA

7.1. Adaugare contact nou

1. Selectati Meniu, Agenda apoi Adaugare contact nou.
2. Puteti introduce in agenda in acest moment un Nume, Numar si Adresa de email. De asemenea puteti asocia ptr. acest contact o imagine, un videoclip sau o sonerie.
3. Apasati tasta Meniu (Optiuni) si accesati Gata ptr salvare, Adaugare Detaliu ptr. introducerea unor nr. suplimentare de telefoan, nume firma, Zi de nastere. Grupuri apelanti, Setari agenda.

7.2. Cautarea unui contact

1. Selectati **Meniu** apoi **Agenda**
2. In lista de contacte, introduceti numele dorit sau primele litere ale numelui dorit. Ptr. apelarea contactului respectiv selectati SIM-ul de pe care vreti sa sunati apoi apasati tasta Apel.

7.3. Optiuni

1. Selectati **Meniu**, **Agenda** apoi **Obtiuni**.
2. Selectati Apelare ptr a apela contactul respectiv
3. Selectati Vizualizare ptr. a vedea detalii ale contactului respectiv.
4. Selectati Trimiteti Mesaj Text sau MMS ptr a trimite mesaj contactului respectiv.
5. Selectati Editare ptr. a edita contactul respectiv
6. Selectati Stergere ptr. a sterge contactul respectiv
7. Selectati Copiere ptr . a copia contactul respectiv din/in telefon/SIM card
8. Selectati Mutati ptr a muta contactul respectiv.
9. Selectati Expediere Contact ptr. a trimite contactul respectiv ca mesaj text, MMS, Email sau prin Bluetooth.
10. Adaugati in Lista neagra contactul respectiv
11. Selectati Grup de apelare ptr. a introduce contactul respectiv intr-un anumit Grup de Persoane.
12. Selectati Setari Agenda ptr a efectua diferite personalizari: locatie memorie, apelare rapida, numarul meu, numere suplimentare, stare memorie, copiere contacte, mutare contacte, stergere toate contactele,

8. MESAJE

8.1. Creare mesaj nou SMS

1. Accesati mesaje , selectati **Scrieti mesaje**, apoi selectati **SMS**
2. Apasati tasta Meniu (Obtiuni) apoi selectati obtiunea dorita, incluzand Expediere catre, Inserare simbol, Metoda introducere, Inserare Sabloane, Setari avansate , Salvare in Schite.
3. Apasati tasta **Meniu (Obtiuni)** si selectati **Expediere catre** apoi introduceti numarul sau alegeti din agenda.
4. Accesati mesaje , selectati **Mesaje Primite**, apoi puteti vizualiza mesajele primite.
5. Accesati mesaje , selectati **Schite**, apoi puteti vizualiza schitele facute.
6. Accesati mesaje , selectati **Casuta iesiri**, apoi puteti vizualiza mesajele netrimise/ in asteptare.
7. Accesati mesaje , selectati **Mesaje Trimise**, apoi puteti vizualiza mesajele trimise.
8. Accesati mesaje , selectati **Stergere mesaje**, apoi puteti alegeti mesajele care doriti sa le stergeti.
9. Accesati mesaje , selectati **Difuzare mesaje**, apoi puteti activa emiterea mesajelor **info**.
10. Accesati mesaje , selectati **Sablon**, apoi puteti alege sa trimiteti mesajele predefinite.
11. Accesati mesaje , selectati **Setari mesaje**, apoi puteti sa setati diferite aspecte ptr mesajele SMS si MMS.

8.2. Creare mesaj nou Multimedia

1. Accesati mesaje , selectati **Scrieti mesaje**, apoi selectati **Mesaje Multimedia**
2. Apasati tasta Meniu (Obtiuni) apoi selectati obtiunea dorita, incluzand Inserare simbol, Metoda introducere, Adaugare Fotografie, Adaugare Sunet, Adaugare Video, Adaugare Subiect, etc.
3. Apasati tasta **Meniu (Obtiuni)** si selectati **Expediere catre** apoi introduceti numarul sau alegeti din agenda.
4. Apasati tasta Meniu (Obtiuni) si selectati Expediere, Obtiuni expediere, Editare recipient, etc.

9. EMAIL

1. Accesati Email , selectati **Conturi Email**, apoi setati un cont de email POP3 introducind parametri specifici contului respectiv : nume, adresa email, utilizator, parola, tip de cont, adresa server-ului de mail, numarul portului, etc.
2. Dupa crearea contului de mail, accesati **Email** si puteti Trimite email-uri, Primi email-uri

10. SETARI

10.1. Setari dual SIM

Se foloseste pentru Setarea modului de lucru pentru cele doua cartele SIM: Dual SIM deschis, Numai Cartela SIM 1 deschisa, Numai Cartela SIM 2 deschisa sau de modul de zbor (nici o Cartela SIM deschisa).

Nota: o cartela SIM poate fi inactiva, dar continutul din acest SIM poate fi vizualizat, cum ar fi agenda telefonica, mesaje, etc

10.2. Setari telefon

1. Ora si data - puteti seta orasul de origine, ora i data curenta, precum si formatul pentru afisarea lor
2. Programare oprire/pornire telefon - pentru programarea ora de Pornire/Oprire telefon dupa cum doriti.
3. Limba - pentru a schimba limba sistemului dupa cum doriti.
4. Metoda Preferata de introducere - se foloseste pentru setarea metodei de introducere implicita atunci cand scrieti mesaje, sau editati siruri de caractere.
5. Afisare caracteristici – pentru a seta Imaginea de fundal, Economizorul ecran, Imaginea ptr. ecran pornit/oprit, Afisare data si ora, Tipul de ceas, Bara de Meniu Rapid.
6. Teme – setati una din cele 2 teme predefinite.
7. Text de intampinare – setati textul de intampinare care sa apara la pornirea telefonului.
8. Comenzi rapide – selectarea comenzilor rapide.
9. Actualizarea automata a datei si orei – setati daca data si ora din telefon sa fie actualizate automat.
10. Setari UART – selectati SIM-ul corespunzator setarilor UART
11. Setari diverse – setati lumina de fundal a ecranului

10.3. Setari retea

Se foloseste pentru a stabili modul de selectie retea (automat/manual), Retele preferate ptr SIM1 / SIM 2, selectia automata a retelei 2G sau 3G .

10.4. Setari securitate

Pentru a gestiona securitatea telefonului dumneavoastra mobil si pentru a-l pune in siguranta.

10.4.1. Cartela SIM 1 / Cartela SIM 2 setare de siguranta

In cazul in care "blocarea cartelei SIM" este activata, de fiecare data cand porniti telefonul mobil va trebui sa introduceti codul PIN. Daca ati gresit codul PIN de intrare de trei ori in mod repetat, cartela SIM va fi blocata. Va trebui sa obtineti codul PUK1 pentru a debloca. Va rugam sa contacta i operatorul retelei pentru a obtine codul PUK1 atunci cand este necesar.

10.4.2. Blocare telefon

Se foloseste pentru a schimba starea de blocare a telefonului, in cazul in care aceasta este activata, este necesara parola telefonului la pornirea acestuia.

Nota: parola implicita a telefonului este 1122, va rugam sa o schimbati cat mai curand posibil dupa achizitionarea telefonului mobil.

10.4.3. Blocare automata a tastaturii

Se foloseste pentru a activa (de asemenea este nevoie sa setati timpul de asteptare) sau a dezactiva blocarea automata a tastaturii in modul de asteptare.

Ptr. deblocare tastatura apasati consecutiv Tasta Meniu si tasta "Aa" stanga.

Nota: Daca tastatura este blocata, va rugam sa actionati conform indicatiului pop-up de pe ecran pentru a debloca tastatura, sau tastatura nu functioneaza.

10.4.4. Schimbare parola

Se foloseste pentru a schimba parola ce va permite blocarea sau deblocarea telefonului dvs. mobil.

10.4.5. Administrator certificate

Aici puteti gasi Certificatele specifice autentificarii in cazul navigarii pe diferite servere de internet si de asemenea puteti adauga si alte certificate de autentificare.

10.4.6. Anti-Furt

Dupa ce ati introdus parola Anti-Furt, puteti schimba statusul si seta corespunzator functia Anti-Furt.

Status: Porniti / Oprite aceasta functie prin apasarea Tastei Meniu.

Setari: Accesati meniul setari si introduceti urmatoarele informatii:

Parola Anti-Furt: modificati parola antifurt.

Nr. prestabilit: introduceti un nr. de tel la care sa fiti anuntat de furtul telefonului.

Mesaj Presetat: mesajul initial este: "Telefonul prietenului a fost pierdut, anuntati-l va rog". Puteti de asemenea edita mesajul prestat.

Daca dupa ce schimbati cartela SIM, introduceti gresit parola de urmarire mobil, telefonul va trimite un mesaj prestat catre un numar prestabilit. Parola setata initial este "1122".

10.5. Conectivitate

Administrarea conexiunii: Puteti accesa si seta conexiunea de date activa in acel moment (WIFI, Bluetooth, Cont de date).

10.5.1. WIFI

Puteti sa va conectati la o retea wireless si sa navigati pe internet. In acest meniu puteti accesa Conectare, Adaugare, Editare, Stergere, Schimbare prioritate, Stare curenta, Dezactivare, Resetare.

10.5.2. Bluetooth

Se foloseste pentru a seta parametrii pentru o conexiune Bluetooth. Atunci cand intrati in aceasta aplicatie, puteti alege

1. **Pornire** – pentru a porni sau opri Bluetooth din telefonul dvs. mobil.
2. **Vizibilitate** - pentru a seta daca telefonul dvs. sa fie vizibil sau nu ptr. alte dispozitive
3. **Aparatul meu** - pentru a vizualiza toate dispozitivele Bluetooth gasite sau pentru a cauta unul nou. Selectati un singur dispozitiv i apasati pe **Meniu**, Va puteti conecta cu dispozitivul, redenumi aparatul, sterge dispozitivul, sterge toate dispozitivele si afisare lista de servicii.
4. **Cautare dispozitiv audio** - pentru a cauta aparate Bluetooth in jurul telefonul dvs. mobil.

5. Schimbare nume telefon – puteti schimba denumirea aparatului dvs.

6. Setari avansate - pentru a seta parametrii Bluetooth, inclusiv schimbarea caili audio si setarea FTP, calea de memorare, permisiunea accesului precum si vizualizare adresa Bluetooth.

Nota: pentru siguranta, atunci cand va conectati la un alt dispozitiv Bluetooth, s-ar putea sa fie nevoie de parola, va rugam sa introduceti aceeași parola ca și cea a dispozitivului la care doriti sa va conectati.

10.5.3. Cont de date

In acest submeniu veti putea alege contul de date aferent conexiunii WAP sau HTTP si furnizorului de servicii internet si de asemenea sa creati un cont nou.

Ptr. crearea unui cont nou de date va rugam sa solicitati setarile necesare operatorului dvs. de servicii gsm.

Puteti accesa site-uri WAP si HTTP si folosi servicii WAP de pe telefonul dvs. Ptr. a accesa aceste site-uri cu ajutorul telefonului dvs. aveti nevoie de activarea unor servicii de internet furnizate de operatorul dvs. gsm si de setarea unor anumiti parametri in telefon. Ptr. detalii legate de serviciile de internet si tarife va rugam sa contactati operatorul dvs. gsm.

Setarea unui profil de conectare

Setarea contului de date:

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Servicii, Cont de Date**.
2. Selectati operatorul dvs. de servicii din lista. Apasati tasta **Meniu (Editare)** sau tasta **OK** si **Editare** ptr a accesa parametrii.
3. Setati contul de date cu informatiile furnizate de operatorul dvs. gsm.
4. Apasati tasta **Meniu (OK)** si selectati **OK** ptr. **Salvare** sau **Tasta Revenire (No)** ptr. a parasii meniul fara a salva.

10.6. Reinitializare setari implicite

Resetarea la parametrii initiali din fabricatie. Ptr. aceasta operatie este necesara introducerea parolei telefonului.

Accesand aceasta functie, setarile tonurilor de apel (sonerie, volum , tip) , tonurilor de mesaj, de alarma, a tastaturii, imaginii de fundal, temeii folosita in meniu, vor reveni la cele setate initial din fabricatie.

11. MULTIMEDIA

11.1. Camera

Telefonul dispune de o camera foto cu ajutorul careia puteti face fotografii si salva in memoria telefonului sau a cardului de memorie.

Ptr. accesarea camerei, apasati Tasta Meniu / Multimedia / Camera sau din meniul de asteptare, apasati Tasta "Aa" dreapta. Apasati tasta OK ptr. a fotografia, Tasta Revenire ptr. a parasi meniul Camera sau Tasta Meniu ptr. a accesa urmatoarele setari:

1. Comutare la: Puteti schimba intre captura foto si captura video
2. Mod captura: Puteti alege intre o captura a imaginii sau multicaptura
3. Marime fotografie: Setati dimensiunea fotografiei (VGA, 1M, 2M, 3.2M)
4. Temporizator: Puteti seta timpul ca: instantaneu sau temporizat.
5. Balans luminozitate: Puteti seta automatic, incandescent, fluorescent, insorit si innorat
6. Efecte: Puteti seta ca: normal, alb-negru, rosu, verde, albastru, galben, reminiscent si negative.
7. Setari avansate: puteti seta calitatea fotografiei, timpul de expunere, sunet declansator, filtru antilicarire si setari implicite.

Inregistrare video HD

Cand accesati aceasta functie, puteti filma in format video HD. Ptr. accesarea camerei de filmare, apasati Tasta Meniu / Multimedia / Camera sau din meniul de asteptare, apasati Tasta "Aa" dreapta. Apasati Tasta Meniu ptr. a accesa functia de Camera si selectati Inregistrare Video. Apasati Tasta **OK** pentru a incepe, apasati Tasta **Revenire** pentru a parasi filmarea sau Tasta Meniu pentru a accesa meniul setari video:

1. Comutare la: Puteti schimba intre captura video si captura foto.
2. Mod captura: Puteti alege intre o captura normala sau captura nocturna.
3. Rezolutie inregistrare: Setati rezolutia filmarii (320x240, 640x480, 720x480)
4. Balans luminozitate: Puteti seta automatic, incandescent, fluorescent, insorit si innorat
5. Efecte: Puteti seta diferite efecte ptr inregistrarea ce urmeaza sa o faceti.

6. Marime inregistrare: Setati dimensiunea filmarii (limitat sau nelimitat)
7. Setari avansate: puteti seta calitatea inregistrarii, inregistrare cu/fara sunet, filtru antilicari si setari implicite.

11.2. Vizualizare imagini

1. Apasati tasta **Meniu (Optiuni)** apoi selectati **Multimedia, Vizualizare Imagini**.
2. Apasati tasta Meniu (Obtiuni) apoi selectati Stil Rasfoire si Memoria de unde incarcati si vizualizati fotografiile.

11.3. Redare Audio

1. Apasati tasta **Meniu (Optiuni)**, **Multimedia** apoi selectati **Redare Audio**.
2. Apasati tasta **Meniu (Lista)**, **Obtiuni**, apoi selectati **Reincarcare Lista, Setari**. Accesati interfata Redare Audio si setati Redare sau Pauza ptr. melodiile din lista prin apasarea tastei OK. Apasati tastele numerice "4" sau "6" ptr. a alege melodia anterioara / urmatoare; Apasati Tastele Volum laterale ptr. a seta volumul auditeii.
3. Apasati Tasta Revenire (**Inapoi**) ptr. a reveni in meniul principal.

11.4. Redare Video

1. Apasati tasta **Meniu (Obtiuni)**, **Multimedia** apoi selectati **Redare Video**.
2. Apasati tasta Meniu (Lista), Optiuni, apoi selectati Flux URL, Profiluri retea, Memorare.

11.5. Radio FM

Setul de casti Handsfree functioneaza ca antena atunci cind vreti sa ascultati un post radio FM.

1. Conectati setul de casti Handsfree la telefon.
2. Apasati tasta **Meniu (Obtiuni)**, **Multimedia** apoi **Radio FM** ptr a activa functia de radio FM. Dupa activarea functiei, telefonul va reda un program radio.
3. In interfata de Radio FM, puteti seta urmatoarele:
Apasati Tastele Volum laterale ptr. a seta volumul auditeii.
Apasati Tasta Deplasare ptr. a cauta posturi radio.
4. Apasati tasta **Meniu (Obtiuni)** apoi selectati Lista Canale, Cautare automata, Setari, etc.

11.6. Inregistrare sunete

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Multimedia, Inregistrare audio**.
2. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Inregistrare**. In timpul inregistrarii apasati tasta **OK** ptr. a seta **Pauza / Continuation inregistrare**.
3. Apasati Tasta Revenire (**Stop**) ptr. a opri inregistrarea.

11.7. Expunere diapozitive

1. Apasati Meniu si alegeti directorul pe care doriti sa il redati, din memoria telefonului sau de pe cardul de memorie. Alegeti Selectare apoi Redare pe directorul ales ptr. a vizualiza automat fotografiile din cadrul directorului respectiv. Puteti de asemenea alege Setari ptr. a selecta Tipul de redare (Manual, Automat o data sau Automat repetare), Viteza de redare, Efectele video si sonore la redare si Sortare dupa .

11.8. Editor fotografii

1. Apasati tasta **Meniu (Optiuni)**, apoi selectati fisierul pe care doriti sa-l incarcati din telefon, card de memorie sau aparatul foto. Puteti seta ptr. fotografia incarcata redimensionare automata, decupare anumita zona sau decupare manuala.

12. ADMINISTRATOR FISIERE

Pentru a vizualiza fisierele si folderele in cardul de memorie. Pentru fiecare dosar, optiunile sunt:

Deschidere – pentru a deschide mapa curenta

Format – pentru a formata memoria respectiva

Redenumire – redenumire dosar

Detalii – detalii despre memoria respective: marime totala, marime disponibila, etc.

Descriere Foldere implicite

Primate - pentru a stoca fisierele primite prin Bluetooth.

Muzica mea - pentru a stoca fisierele audio care se redau direct din player-ul audio

Imagine – pentru a stoca fotografiile facute cu camera foto sau pentru vizualizarea imaginilor

Video – pentru a stoca fisierele video si inregistrarile facute cu inregistrarea video

Audio – pentru a stoca notitele vocale inregistrate de inregistrator de sunet.

13. ORGANIZATOR

13.1. Lista de sarcini

Se foloseste pentru a adauga program unei zile speciale. Daca nu exista nicio sarcina puteti apasa <Adaugare> pentru a adauga o sarcina noua si apoi sa completati continutul conform cerintelor. Selectati o sarcina si apasati <Optiuni>, apoi puteti alege:

Vizualizare – pentru a vizualiza detaliile sarcinii curente

Adaugare – pentru a adauga o sarcina noua

Editare – pentru a edita o sarcina curenta

Sterge- pentru a sterge sarcina curenta

Stergeti tot – pentru a sterge toate sarcinile

Trimitere vCalendar – pentru a trimite o sarcina ca vCalendar prin SMS sau pentru a salva in fisier.

13.2. Calculator

Pentru folosirea calculatorului folositi uratoarele taste:

-ptr. introducerea cifrelor tastati direct cifra respectiva

-ptr. alegerea operatiei dorite, mutati cursorul cu ajutorul tastei OK (stanga/dreapta/sus/jos) dupa car apasati OK ptr. selectarea operatiei.

13.3. Calendar

Arata calendarul in functie de data telefonului mobil. Apasati **Optiuni**, pentru a selecta

Vizualizare sarcini – pentru a vizualiza lista de atributii pentru ziua curenta .De asemenea, puteti adauga o noua sarcina.

Adaugati sarcina - pentru a adauga o activitate noua.

Sari la data - pentru a sari la data pe care ati introdus-o.

13.4. Cititor Carte electronica (E-book)

Puteti citi carti electronice (E-book) in format "txt" cu ajutorul acestei functii. In submeniul E-book, puteti accesa urmatoarele: Gasire, Salt la, Mergi la salvate, Adauga, Sterge, Informatii carte, Setari, Aplicatii setari, Ajutor, Inchide.

13.5. Note

Puteti introduce diferite notite sau puteti Vizualiza, Edita, Introduce notite noi, Marca sau Sterge notite deja existente.

13.6. Alarma

Exista 5 alarme care pot fi folosite. Pentru fiecare alarma, apasati <EDITARE> si puteti seta: Status (pornire sau oprire), Timp, statutul de repetare (atunci cand aceasta este "zile", se poate stabili, de asemenea, ziua), Audio (ton de alerta), durata amanare (durata implicit este de 4 minute) si tipul de alerta.

13.7. Ora pe glob

Puteti vedea ora in diferite locatii ale globului pamantesc. Daca vreti sa calatoriti intr-o tara cu un fus orar diferit, puteti muta cursorul pe tara respective si puteti afla diferenta de fus orar.

13.8. Convertor valuta

Puteti introduce rata de schimb si calcula diferite schimburi valutare.

13.9. Sincronizare

Puteti sincroniza agenda, calendarul si sarcinile din telefonul dvs. cu un server de sincronizare (de ex: Goosync, Hotmail, etc).

Ptr. inceput trebuie sa va creati un cont pe serverul respectiv, obtinand un username si parola.

Selectati **Editare cont**, dupa care setati urmatoorii parametri:

1. **Nume cont**: setati numele contului pe care vreti sa-l creati
2. **Tip transfer**: puteti seta WAP sau HTTP in functie de conexiunea pe care o folositi
3. **Setari server**: introduceti adresa serverului de sincronizare
4. **Aplicatii de sincronizat**: selectati Agenda, Calendar si/sau Sarcini.
5. **Setari date transfer**: setati adresele datelor de transfer, pe care le gasiti pe serverul de sincronizare. (ex: Agenda: **contact**, Calendar: **calendar**, Sarcini: **task**)
6. **Setari conexiune**: selectati diferite setari ptr. conexiunea pe care doriti sa o folositi, cum ar fi: Contul de date, Folosire Proxy, Adresa Proxy, Port Proxy, Username si Parola.
7. **Sincronizare regulata**: setati momentele cind doriti sa faceti sincronizarea. (de ex: niciodata, cind porniti telefonul, zilnic, saptamanal, lunar)

8. **Raport sincronizare:** selectati daca doriti sa primiti un raport privind sincronizarea.

14. SERVICII

Intrand in acest meniu service, puteti alege: Servicii operator, Servicii de internet, WLAN, MSN, Yahoo, Skype, Facebook, Cont de date, Manager licente.

14.1. Servicii operator

Pentru a afisa toate serviciile din cartela SIM, numele si serviciile ar trebui sa fie diferite in functie de cartela SIM si Operator

Acest **serviciu** este suportat de operator, daca nu stiti ce suporta cartela SIM, va rugam sa contactati operatorul pentru mai multe informatii.

14.2. Servicii internet

Intrand in acest meniu service, puteti alege:

- 1. Pagina de pornire** - pentru a intra pe pagina de web, prin intermediul WAP/GPRS.
- 2. Semne de carte** – lista tuturor semnelor de carte; puteti sa le edita i sau sa introduceti un marcaj, in mod direct; adaugare marcaje noi.
- 3. Introducere adresa** – Introduceti adresa paginii de internet pe care doriti sa o vizualizati
- 4. Ultima pagina accesata** – Ptr. a naviga direct la ultima pagina vizitata
- 5. Pagini recente** - pentru a vizualiza site-uri web vizitate recent si pentru a le introduce direct.
- 6. Pagini memorate** -
- 7. Mesaje retea primite**
- 8. Setari** – puteti seta SIM-ul preferat, profilul, obtiuni browser, mesaje de retea, stergere memorie cache, stergere cookie, certificate acreditate ptr. a putea naviga pe internet

Setarea profilului de WAP

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Servicii, Servicii Internet, Setari**.
2. **Selectati Profilul** – selectati **SIM**-ul cu serviciile de internet corespunzatoare.
3. Selectati **Profiluri**, selectati **SIM**-ul cu care doriti sa va conectati la serviciile de internet, selectati **Adaugare nou** sau **Editare** ptr. crearea unui profil de internet nou sau editarea unuia deja existent.

Conectarea la serviciile de internet

Puteti rasfoi pagini de WAP (HTTP) pe telefonul dvs. dupa ce ati setat profilul si parametrii Wap corespunzatori.

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Servicii, Servicii Internet**.
2. Selectati Introducere adresa si apasati Tasta Meniu (OK).
3. Introduceti un site WAP (HTTP).
4. Apasati tasta **Meniu (Obtiuni)** apoi selectati **OK, Realizat**.
Browser-ul de internet va accesa pagina WAP (HTTP) corespunzatoare.

14.3. Manager licenta

Puteti seta Lista cu Licente, Informatii generale despre licente si Setari avansate

15. PROFILE UTILIZATOR

Puteti selecta unul din cele 7 profil de utilizator, acestea fiind dupa cum urmeaza:

General
Intalnire
In aer liber
In interior
Silentios
Casti
Bluetooth

Pentru fiecare element al profilului, apasati **OK** pentru a **Activa** sau **Personaliza** profilul respectiv.

In submeniul **Personalizare**, puteti selecta

1. Setare sunet – pentru a personaliza sunetul de Cartela SIM 1 / Cartela SIM 2 apel primit, apel video, pornire / oprire, cartela SIM 1 / Cartela SIM 2 mesaj, ton tastatura. Ptr. fiecare setare in parte exista o lista cu tonurile disponibile.

2. Volum – pentru a seta volumul pentru tonul de apel si sunetul de tastatura.

3. Tip alerta - pentru a selecta un singur tip de sunet, doar vibrare, vibrare si sunet sau vibrare dupa sunet.

4. Tip sunet – tip de sonerie singular, repetitiv sau sonerie crescatoare.

5. Notificare conectare – pentru a seta un ton de apel sau vibratie atunci cind persoana apelata raspunde apelului dvs.

6. Sunet de avertizare – pentru a permite avertizare, eroare si ton conectare. In cazul in care unul dintre ele este marcat, informatiile asociate vor provoca un sunet.

7. Modul raspuns – Atunci cand aceasta functie "Oricare tasta" este activata, puteti sa raspundeti unui apel apasand orice tasta, cu exceptia **Tasta Revenire** sau **Tasta Inchidere Apel**.

16. JOCURI

16.1. Aplicatii Java

Instalarea unei aplicatii Java:

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Manager fisiere**, selectati un fisier care are extensia .jar sau .jad
2. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Instalati** si urmariti instructiunile furnizate de telefon.
3. Selectati destinatia unde sa instalati aplicatia: memoria telefon sau cardul de memorie.
4. Aplicatia va fi instalata in directorul **JAVA**.

Stergerea unei aplicatii Java:

1. Apasati tasta **Meniu (Obtiuni)** apoi selectati **Jocuri, Java, Java**.
2. Selectati aplicatia care doriti sa o stergeti, apasati tasta **Meniu (Obtiuni)** apoi selectati **Stergere**, confirmati prin apasarea tastei **OK**.

16.1.1. Setari Java

Puteti seta caracteristicile aplicatiilor Java: Audio pornit/oprit, Lumina fundal pornit/oprit, Vibratii pornit/oprit si vizualiza dimensiunea memoriei alocate ptr. aceste aplicatii.

16.1.2. Setari securitate Java implicite

Puteti vizualiza si seta setarile implicite de securitate ptr. aplicatiile Java cum ar fi: Accesul la retea, Solicitare conectare, Mesaje, Multimedia, Citire date utilizator, Scriere date utilizator, Conectare locala.

16.1.3. Retele ptr. Java

Puteti selecta accesarea aplicatiilor Java cu ajutorul retelei GSM corespunzatoare SIM 1, SIM 2 sau a retelei WLAN.

17. eBUDDY

Ebuddy reprezinta serviciul de mesagerie online pentru MSN, Yahoo, Gtalk, Facebook, ICQ, MySpace si AIM (AOL). Fie ca esti acas , la scoala , la munc sau in c l torie, cu eBuddy po i vorbi online cu oricine oricînd.

Ptr. folosirea acestei aplicatii este nevoie doar de crearea unui cont eBuddy cu username si parola, dupa care selectati serviciul de mesagerie la care doriti sa va conectati (ex: yahoo, MSN, Skype, etc)

si introduceti username si parole corespunzatoare acelor servicii de mesagerie.

18. SNAPTU

Cu Snaptu, nu doar ca ai acces la siturile de socializare (Facebook, Twitter, etc.), dar ai acces la previziunile meteo de la AccuWeather, imaginile de pe Flickr, notitele de pe Google Calendar, Picasa, chiar si jocuri precum Sudoku, Trivia si Stiri de la diverse siteuri dedicate sau RSS.

19. BOLT

Browserul pentru Internet BOLT ofera cea mai mare viteza de incarcare a paginii, fiind singurul browser J2ME care suporta streaming video de pe siteuri de media sharing.

BOLT este compatibil cu majoritatea telefoanelor mobile si este construit pe o arhitectura WebKit, ce asigura cea mai buna vizualizare a paginilor. Interfata browserului BOLT este usor de utilizat, iar adaptarea dinamica a continutului permite implementarea BOLT atat pe dispozitivele high-end cat si pe cele low end.

20. ALLVIEW STORE

Allview Store reprezinta magazinul online Allview cu aplicatii si jocuri gratuite, din cele mai diverse domenii, pentru telefoanele mobile.

21. Metoda de introducere

21.1. Schimbarea metodei de introducere

Indicatorul modului curent de introducere este afisat in coltul stanga sus al ecranului.

Puteti apasa tasta



ptr. a schimba modul de introducere al textului.

Indicator

Mod introducere text

abc

Introducere litere

123

Introducere cifre

Nota: Apasati tasta Revenire (anulare) o singura data ptr. a sterge ultimul caracter introdus. Apasati timp de 3 sec tasta Revenire (anulare) ptr. a sterge toate caracterele introduse .

In orice mod de introducere text (cu exceptia modului cifre "123"),

apasati



ptr a introduce un spatiu.

21.2. Introducere (ABC si abc)

In modul de introducere "ABC" sau "abc", apasati tasta corespunzatoare literei dorite.

21.3. Introducere Numere

In modul de introducere text "123", apasati tasta corespunzatoare cifrei dorite.

In modul de introducere "ABC" sau "abc", apasati tasta ALT apoi introduceti numarul.

21.4. Introducere Simboluri

Ptr. orice mod de introducere, apasati tasta simbol ptr. a afisa o lista de simboluri.

FAQ

Aceste liste sunt doar pentru referinta, in cazul in care problemele dvs. NU pot fi rezolvate in conformitate cu acestea, va rugam sa contactati distribuitorul local.

Probleme comune	Cauze & Solutii
Telefonul nu porneste	Asigurati-va ca apasati tasta Pornire timp de cel putin o secunda; Verificati daca bateria este pozitionata corect. Scoateti bateria, montati-o din nou si reporniti telefonul. Verificati daca bateria este descarcata. Daca este descarcata incarcati-o;
Conectare la retea imposibila	Semnal slab. Incercati din nou intr-o locatie cu semnal; Va aflati in afara ariei de acoperire a retelei de telefonie; Cardul SIM poate fi nevalid. Contactati operatorul retelei dumneavoastra;
Afisare mesaje la start	Verificati daca ati introdus corect cardul SIM; Blocare. Ati selectat functia de blocare automata, introduceti parola inainte sa utilizati telefonul. Introduceti PIN. Ati selectat optiunea de introducere a codului PIN la fiecare pornire a telefonului, prin urmare trebuie sa introduceti codul PIN; Introduceti codul PUK. Introducerea unui cod PIN gresit va bloca telefonul si este nevoie sa folositi codul PUK furnizat de operatorul retelei pentru a porni din nou
Calitate slaba a apelului	Verificati daca volumul a fost ajustat la nivelul potrivit; Daca telefonul este utilizat in locuri fara semnal, precum la subsol sau in apropierea cladirilor foarte inalte, unde undele radio nu pot ajunge; Folositi telefonul la o ora de varf si suprasolicitarea retelei face imposibila apelarea;
Timp scurt de standby	Timpul de standby variaza in functie de setarile retelei, Daca nu se afla in aria de acoperire a retelei si nu primeste semnal, telefonul va cauta incontinuu

	o statie de baza consumand energie si scurtand durata de standby. Va rugam sa mutati telefonul intr-un loc cu semnal puternic sau sa il opriti pentru un moment; Inlocuiti bateria cu una noua, daca este cazul;
Eroare card SIM	Suprafata metalica a cardului SIM este contaminata. Curatati metalul de contact al cardului SIM cu o carpa curata; Cardul SIM nu a fost pozitionat corect; Cardul SIM este deteriorat. Va rugam sa contactati operatorul retelei;
Nu se poate efectua un apel	Confirmati daca ati apasat tasta de apel dupa formarea numarului; Confirmati achitarea facturii; Confirmati validitatea cardului SIM; Confirmati activarea functiei de blocare a apelurilor; Confirmati activarea functiei de apelare fixata;
Nu puteti fi contactat	Verificati daca telefonul a fost conectat la retea; Confirmati achitarea facturii; Confirmati validitatea cardului SIM; Confirmati activarea functiei de blocare a apelurilor; Confirmati activarea functiei de apelare fixata;
Nu se poate incarca bateria	Contact slab. Verificati daca stecherul face contact; Incarcarea are loc la temperaturi mai scazute de -10°C sau peste 55°C. Daca bateria sau incarcatorul au fost stricate, schimbati-le cu altele noi;
Nu pot fi setate unele functii	Operare gresita; Reteaua nu suporta aceste functii sau nu ati aplicat pentru aceste functii.

DECLARATIE

nr.....

Noi Visual Fan SRL, cu sediul social in Brasov, Str Liliacului nr16, 500314 Romania, inregistrata la Reg. Com. Brasov sub nr. J08/818/2002, CUI RO14724950, in calitate de importator, asiguram, garantam si declaram pe proprie raspundere, conform prevederilor art. 5 HG nr.1.022/2002 privind regimul produselor si serviciilor care pot pune in pericol viata sanatatea, securitatea muncii si protectia muncii ca produsul Q1 GET, telefon mobil marca ALLVIEW, nu pune in pericol viata, sanatatea, securitatea muncii, nu produce impact negativ asupra mediului si este in conformitate cu:

-Directiva privind echipamente radio si de telecomunicatii R&TTE 1999/5/CEE (HG 88/303)

-Directiva privind asigurarea utilizatorilor de echipamente de joasa tensiune 73/32/CEE , modificata de Directiva 93/68/CEE (HG457/2003)

-Directiva cu privire la compatibilitatea electromagnetica 89/336/CEE, modificate de Directiva 92/31/CEE si 93/68/CEE (HG497/2003)

Produsul a fost evaluat conform urmatoarelor standarde:

-Sanatate EN 50360, EN 50361

-Siguranta EN 6095-1

-EMC EN 301 489-1/-7/-17

-Spectru radio EN 301511, EN 300328

Produsul are aplicat marcajul CE.

Procedura de evaluare a conformitatii a fost efectuata in conformitate cu prevederile Anexei II a HG nr. 88/2003, documentatia fiind depozitata la SC Visual Fan SRL, Brasov str. Brazilor nr.61, 500313.

Declaratia de conformitate este disponibila la adresa www.allview.ro

CE1313

Valoare SAR maxim: 1.22W/kg



English

User Manual
GSM Mobile Phone
Model Q1 G3T



English	
Contents	
Attention and Precautions	4
FOR YOUR SAFETY	4
SECURITY REQUIREMENTS	5
MAINTENANCE	5
Your Phone	7
Getting Started	9
BATTERY	9
REMOVING AND INSTALLING BATTERY	9
CONNECTING TO NETWORK	10
INSERTING AND REMOVING SIM CARD	11
INSERTING AND REMOVING MEMORY CARD	11
POWER ON/OFF PHONE	12
PIN AND PUK	12
PHONE LOCK	13
LOCKING THE KEYPAD	13
CONNECTING TO NETWORK	13
Basic Functions	14
MAKING A CALL	14
MAKING DOMESTIC CALLS	14
DIALING EXTENSION NR. OF FIXED-LINE PHONE	14
DIALING INTERNATIONAL CALLS	14
DIALING PHONE NR. IN THE CALL RECORDS	14
EMERGENCY CALLS	15
ANSWERING A CALL	15
CALL RECORDS	15
CALL OPTIONS	15
Using the menus	17
ACCESSING A MENU FUNCTION	17
EXITING A MENU FUNCTION	17
LIST OF MENU FUNCTIONS	17
Call record	19
CALL HISTORY	19
VIDEO CALL	19
CALL SETTINGS	19
Phonebook	20
ADD NEW CONTACT	20
SEARCHING FOR A CONTACT	20
Messages	21
CREATE A NEW SHORT MESSAGE	21
CREATE A NEW MULTIMEDIA MESSAGE	21
Email	21

English	
Settings	22
DUAL SIM SETTINGS	22
PHONE SETTINGS	22
NETWORK SETTINGS	22
SECURITY SETTINGS	22
ANTI-THIEF	23
CONNECTIVITY	23
WIFI	24
BLUETOOTH	24
DATA ACCOUNT	24
Multimedia	26
CAMERA / HD VIDEO RECORDING	26
IMAGE VIEWER	26
AUDIO PLAYER	27
VIDEO PLAYER	27
FM RADIO	27
SOUND RECORDER	27
File manager	27
Organizer	28
TASK	28
CALCULATOR	28
CALENDAR	28
Ebook	28
ALARM	28
SINCRONIZATION	29
Services	29
INTERNET SERVICES	29
WAP	31
User profiles	32
Games	33
JAVA APPLICATIONS	33
EBUDDY	33
SNAPTU	33
BOLT	34
ALLVIEW STORE	34
Input method	35
CHANGING THE TEXT INPUT MODE	35
ENTERING (ABC AND ABC)	35
ENTERING NUMBERS	35
ENTERING SYMBOLS	35

Attention and Precautions

For your safety



Remember to comply with legal requirements and local restrictions when using the phone, for example, in aero plane, petrol stations, hospital or while driving



Always keep your handsfree to operate the vehicle while driving. Your first consideration while driving should be road safety. Don't use handset while driving.



As per the law, phone should not be used at refueling point near fuel or chemicals.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm(9 inches) between the phone and pacemaker. When using the mobile phone hold it to the ear which is furthest away from the pacemaker. For more information, consult your doctor.



All wireless phones may be susceptible to interference, which could affect performance. The phone may cause interference in the vicinity of TV sets, radios and PCs.



The mains voltage (V) specified on the power supply unit must not be exceeded. Otherwise the charging device may be damaged. The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Only qualified personnel may install or repair this product.



When connecting to any other product, read its user guide for detailed safety instructions. Do not connect incompatible products.



Use only approved enhancements and batteries. Do not connect incompatible products.

English

Security Requirements

Before making or answering a call, you should pay attention to the local laws about the use of wireless mobile phones and take them into account in practical use.

Traffic safety

Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.

Flight Safety

Please turn off your GSM mobile phone before the airplane takes off in order to protect airplane's communication system from interference.

Environment Safety

Do not use your mobile phone near precision electronic equipment.

Radio wave interference may cause malfunctioning of such electronic equipment and other problems.

Operating of mobile phone may interfere with medical devices like hearing aids and pacemakers.

Do not use your phone in a potentially dangerous atmosphere.

Maintenance

Battery instructions

When the phone automatically turns off or indicates the alarm information of power shortage, please charge the battery in time.

For the first few times, please charge the battery fully.

When not in use, please separate the battery with power supply.

Overcharging will shorten the life of the battery.

Do not expose your products to extreme high or low temperatures. Do not expose the battery to temperatures above +40 .

Do not use damaged battery.

Do not expose your mobile phone to direct sunlight or in hot areas.

High temperatures can shorten the life of electronic devices.

Do not expose the battery into fire or throw it away. Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Follow these guidelines to protect your products :

keep the products out of children's reach

Keep your product dry. Do not expose it to liquid or moisture.

Do not short-circuit the battery, as this can cause excessive heat to bring about fire.

Do not expose your mobile phone to direct sunlight or in hot areas.

High temperatures can shorten the life of electronic devices.

Do not attempt to disassemble the mobile phone and battery by yourself. Prevent liquid from leaking into your phone.

English

Please use original accessories. Using any unauthorized accessories may affect your mobile phone's performance.

Note: The performance of your phone depends on your local network operator's card and how you actually use it. We are not responsible for any damages due to inappropriate use.

Please read these brief rules. Violation of these rules might cause danger or break laws.

Your Phone

Phone Overview



- 1 Volume key
- 2 Trackpad
- 3 Menu key
- 4 Send key
- 5 Qwerty

- 6 Power key
- 7 Back key
- 8 End key
- 9 Headset jack
- 10 Charger jack

English
Key functions

Keys	Description
[Send key]	Press to perform one of the following: Open recent call log Call a contact when a contact name/number is highlighted
[Menu key]	Press to open a list of actions available on the current screen. Select Yes in prompt windows.
[End key]	When on a call,press to hang up. When not on a call: Press and hold to power on/off the phone. Press to back to idle screen.
[Back key]	Press to return to previous menu. Select No in prompt windows.
[Trackpad key]	Press this key in idle mode to enter the main menu. Performs the function of the prompt displayed at lower left corner of the screen.

Getting Started

 
Battery

The battery at its initial condition is charged to 50% full, and can be used after unwrapping.

Removing and installing battery

For removing:


- A. Push the battery back cover;
- B. Lift the battery up as indicated by the arrow;
- C. Take the battery out.

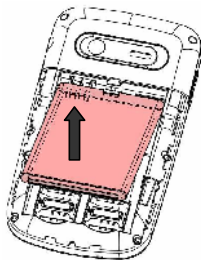

Warning: Make sure to power off the phone before taking out SIM card, battery, otherwise your SIM card might be damaged.

For installing:

 - A. Place the metal contact points of the battery upward and flush with metal contact points in the battery bay, then insert the bottom of battery into battery bay.
- B. Place the back cover of the battery onto the phone squarely, and push in the direction of the arrow till it clicks into place.

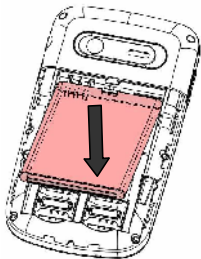

Charging Battery

While charging, the power supply indicator at phone's screen icon zone will flash in a rotation manner, if the phone is off while charging, a charging screen will still appear, indicating that the phone is recharging. If the phone is still being overused while the power supply is insufficient, the recharging indicator will appear on the screen after the recharging has started for a while.

When the power supply indicator at the screen's icon zone shows full and stops flashing, it means charging has completed. If it takes place when the phone is off, the screen will display charging-finished icon. The process generally takes about 2.5 hours. It is normal that the battery, the phone and the charger will become hot during the charging process.

Once charging is completed, disconnect the phone and the charger from the AC power supply.

Note: Battery must be charged in a well ventilated place with surrounding temperature at $-10 \sim +55$, and it is imperative that a charger provided by manufacturer is used. Using unauthorized charger might cause danger, which also violates warranty terms prescribed by the manufacturer. If the charging temperature is too high or too low, the phone will automatically give warning and stop charging, so as to prevent damages to battery.

English

Connecting to Network

SIM card

A valid SIM (Subscriber Identity Module) card must be inserted in the phone before using it.

 
All information related to making connection to the network are recorded in the chips of SIM card, including the names, phone numbers and short messages you have stored in the SIM card Phone book. In order to prevent loss or damage of the info in the SIM card, it is necessary to avoid touching metal contact surface, and keep SIM card far from electricity current and magnet.

Inserting and removing SIM card

Power off the phone; remove battery and other external power connection, as shown in the image.

Insert SIM card into SIM card socket.


When you need to remove SIM card, please power off the phone first, remove battery, then remove the card.

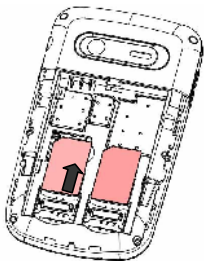

Inserting and removing memory card

Power off the phone; remove battery and other external power connection.

 Insert memory card into card slot as shown in the image.

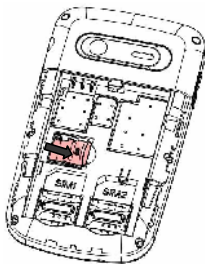

Power on/off phone

To power on, please press and hold the End key. Then the screen will display the prompts like Enter phone password, SIMcard password in sequential order as per the setting done by user. Once the appropriate password is entered, the phone will search for network connection and latch accordingly to the appropriate network.

To power off, please press and hold the End key.

PIN and PUK

To prevent illegal usage, PIN (Personal Identification Number) code is adopted to encrypt for protection of your SIM card. Selecting this option and if having set up PIN code protection, you have to enter PIN code each time you power on the phone.

Press and hold the End key to power on the phone;

Enter PIN code, use Back key to delete input-errors, Menu key for "OK". For instance, if PIN setting is 1234, then enter the following input: 1 2 3 4 "OK".

If there are three consecutive input errors, your SIM card will be locked up by the network, the phone will inquire PUK code.

Note: Your service provider will set up a standard PIN (4 to 8 digits) number for your SIM card; you should change it into your private password as soon as possible. PUK code will be provided by the network provider.

English

Phone lock

The phone lock protects your phone from unauthorized use. The default phone lock code is 1122. You can change it into any numeric string of 4 to 8 digits.

If the phone lock function is enabled, you need to enter the correct phone lock code when the phone is powered on or in the standby mode.

Locking the Keypad

To unlock the keypad, press Menu key and Alt key.

If the Auto Keypad Lock function is enabled and the phone is idle for a preset period in standby mode, the keypad is locked automatically.

Note: When the keypad is locked, you can press Send key to answer an incoming call or make emergency calls.

Connecting to network

After SIM card is successfully unlocked, the phone will automatically search available network (with searching showing on the screen).

Once the connection is made, the name of the service provider will be displayed on the screen. At this time your phone has been connected to the service network.

Note: If the screen prompts "Emergency ", this means you have moved out of the normal network coverage (service range) or your card has not passed authentication, but you can still transmit emergency calls based on signal strength.

Basic Functions

Making a call

When the logo of service provider appears on the display screen, you can dial or receive calls. The info bar at the upper left corner of the display screen shows network signal strength (when there are 5 info bars the signal is at its strongest).

The call quality is very likely to be affected by obstructions.

Making domestic calls

Enter phone number, and then press Send key to make the call. If the user needs to change phone number, press Back key "Clear" back and delete numbers. Dialing animation will be displayed on the screen during dialing. Call state info will be shown on the screen after the called party ends the call

You can enter and dial domestic call following the order:

(Area code) (Phone number) (Dial)

Dialing extension number of fixed-line telephone

Some extension numbers of fixed-line telephone cannot be connected directly, you must dial the power board phone number, then press p key , then dial extension number.

You can dial extension numbers of fixed-line telephone in the following order:

(Area code) (Power board number) P (Extension number) Send key

Dialing international calls

To make an international call, you may press * key to power continually, till the screen displays the pre-digit symbol "+" for international long distance call, which will enable you to make a call from any country without knowing the local international access code.

You can enter numbers in the following sequence to make an international call:

(+) (Country code) (complete phone number) (Send key)

After inputting prefix number, input the code and the complete phone number of the wanted country. The country code follows usual practice, such as Germany 49, UK 44, Sweden 46, India 91 etc.

Like making an international call, the "0" before city code number should be dropped.

Dialing phone numbers in the call records

Every phone number you have dialed or received will be stored in the

English

list of phone call records. The latest dialed, received and missed numbers will be listed, according to their types, in the respective menu of dialed calls, received calls and missed calls. When call record list is full, the old numbers will automatically be deleted. To view the list, do the followings:

In standby state press Send key to view the record for all calls.

All phone numbers in the list can be dialed directly by pressing the Send key.

When the list is displayed, press "OK" to read the details, then "options" to Save or Delete the number.

Emergency calls

As long as in the network service range (which can be confirmed by checking the signal strength bars on the top left corner of the screen), you can always call emergency service. If your network supplier does not provide roaming service in your area, the screen will display "Emergency", to inform you that only emergency call is permitted. If you are within the network service range, you can also make emergency calls even without the SIM card.

Answering a call

An incoming call can be accepted with the single press of Send key. If earphone has been connected, use the button on the earphone to answer a call, and if it is not convenient for you to press it, set automatic answer as on, assuring that the earphone is plugged on, so as to answer calls automatically while the phone rings or vibrates. If Any Key answer function is chosen, then a call can be answered on pressing any key, other than End key and Back key.

Call records

Your phone can also store call records of the latest missed calls, received calls, dialed calls, the time of last call as well as total amount of received calls and total dialed calls for you.

Call options

In call connected state, pressing Menu key "Options" can enter call option, or pressing Back key "H-Free" to activate speaker, under activated-hands free condition, press Back key "H-held" to power off speaker. Operation methods of call options are the same with that of Function menu.

This call options can only be viewed during call process, moreover, the functions of call waiting, call holding, and conference calls need

English

service support, please contact your service provider for details.

In the call options, you can make the following operations:

Hold Single call: Make the current call hold.

End Single call: End the current call.

New call: Enter new dialing interface.

Phonebook: Enter Phone book menu.

Messages: Enter Short message menu. Owing to restriction of network engagement, MMS function is barred during call process.

Sound Recorder: Record the current call.

Background sound: Setup the background sound for the current calling.

Mute: On selecting silence during a incoming call, the ringer will be muted.

DTMF: Operations of DTMF powering on and off

Conference*: Enter multiple party conference call state. By following the prompts, you can have the following functions: receive waiting calls, add them into multiple party call, maintain the multiple party call, talk privately with one party of the conference while maintaining all other callers, connect one party in the call conference with another party while exiting the multiple party call oneself, maintain one party of the multiple party call and end current call and all other maintained calls.

Note: The menu marked * items will only appear in special circumstances. For conference function, it is necessary to apply for service supply to corresponding service operator.

English

Using the menus

The phone offers a range of functions that allow you to tailor it to your needs.

These functions are arranged in menus and submenus which can be accessed by scrolling or using the appropriate shortcut.

Accessing a menu function

1. Press OK key in standby mode.
2. Press Trackpad key to scroll to the desired main menu.
3. Press Menu key to enter the main menu.

If the main menu contains any submenus, reach the desired one with Direction key.

4. Press Menu key to enter the submenu.

Exiting a menu function

You can return to the previous menu level by press back key.

List of menu functions

- | | |
|------------------------|------------------------------|
| 1 Call center | 5 Settings |
| 1-1 Call history | 5-1 Dual Settings |
| 1-2 Video call | 5-2 Phone settings |
| 1-3 Call settings | 5-3 Network settings |
| | 5-4 Security settings |
| 2 Phonebook | 5-5 Connectivity |
| 2-1 Add new contact | 5-6 Restore factory settings |
| 2-2 Search new contact | |
| 2-3 Options | 6 Multimedia |
| | 6-1 Camera |
| 3 Messages | 6-2 Image viewer |
| 3-1 Write message | 6-3 Audio player |
| 3-2 Inbox | 6-4 Video player |
| 3-3 Drafts | 6-5 FM radio |
| 3-4 Outbox | 6-6 Sound recorder |
| 3-5 Sent | 6-7 Slide show |
| 3-6 Delete message | 6-8 Photo editor |
| 3-7 Broadcast message | |
| 3-8 Templates | 7 File manager |
| 3-9 Message settings | |
| | 8 Organizer |
| 4 Email | 8-1 Tasks |
| | 8-2 Calculator |

English

8-3 Calendar

8-4 E-book

8-5 Notes

8-6 Alarm

8-7 World clock

8-8 Currency converter

8-5 Synchronization

9 Services

9-1 STK

9-2 Internet service

9-3 Licence manager

10 User profiles

10-1 General

10-2 Meeting

10-3 Outdoor

10-4 Indoor

10-5 Silent

10-6 Headset

10-7 Bluetooth

11 Games

11-1 JAVA

11-2 Bubble

12 eBuddy

13 Snaptu

14 Bolt

15 Allview Store

Call Records

Call history

1. Select Menu, Call records then Call history SIM 1 or SIM 2.
2. Select Call records for SIM 1 or SIM 2 and browse thru Missed Calls, Dialed Calls, Received Calls.
3. You can also select Call timers, Call Cost, Text message counter and GPRS counters.

Video call

1. Select Menu, Call records then Video call.
2. Select Options for making a Video Call, Selecting the desired camera, Setting Night Mode, Video Call Settings or Advanced Settings.

Call settings

1. Select Menu, Call records then Call settings.
2. Select the SIM card you want to set or Advanced Settings.
3. In Call settings menu, you can select Call Waiting, Divert Call, Barring Call and you can set on/off for these functions or you can check the status of these functions.
4. In Advanced Settings you can set the Black List, Auto redial, Background sound, Call time display, Call time reminder, Auto quick end or Reject by SMS.

Phonebook

Add new contact

1. Select Menu, Phonebook then Add new contact.
2. You can add in phonebook a name, number and email address. Also you can associate a picture, video or ringtone for this contact.
3. Select Menu (Options) and access Save, Add detail for inserting other phone numbers, company name, birthday, Call Groups and Phonebook Settings.

Searching in phonebook

1. Select **Menu** then **Phonebook**.
2. In contact list, insert the name you are looking for or the first letter for that name. For calling that number you have to select first the SIM card then press Dial Key.

Options

1. Select **Menu**, **Phonebook** then **Options**.
2. Select Call for calling the number.
3. Select View to see more details for this number.
4. Select Send SMS / Send multimedia message to send a short message / MMS message to this number.
5. Select Edit to edit the number.
6. Select Delete to delete the number.
7. Select Copy to copy the number from/in phone/SIM card.
8. Select Move to move the number.
9. Select Vcard to send the number as a SMS, MMS, Email or Bluetooth.
10. Select Add to blacklist to put the number in blacklist.
11. Select Caller Groups to insert the contact in a caller group.
12. Select Phonebook settings to set the next parameters: Preferred storage, Speed dial, My vCard, Extra numbers, Memory status, Copy contacts, Move contacts, Delete all contacts.

Messages

Create a new short message

1. Enter Messages, then select SMS
2. Write Message.
3. Press the Menu key (**Option**) and select the required items, including Insert symbol , Input method , Insert template, Advanced, Save to drafts.
4. Press the Menu key (**Option**) and select **Send to** enter number or add from phonebook.

Create a new Multimedia Message

1. Enter Messages, then select Multimedia message
2. Press the Menu key (**Option**) and select the items you want to send, including Insert symbol , Input method , add picture, add sound, add video, add subject and so on.
3. Press the Menu key (**Option**) and select **Send to** enter number or add from phonebook.
4. Press the Menu key (**Option**) and select Send, Send options, edit recipient and so on.

Email

1. Select Email , then select **Email accounts**. This point you have to set up a POP3 email account by setting the specific parameters for your email account: name, email address, username, password, account type, server IP address, port nr, etc.
2. After you created the email account, you can access Email and send / receive emails.

Settings

Dual SIM settings

You can set to have both SIM cards active, only SIM 1 active, only SIM 2 active or Flight mode (both cards off).

Note: SIM card can be off but all the informations stored inside can be seen, like Phonebook, Messages, etc.

Phone settings

1. Time and date – you can set your home town, time and date and the format to display them.
2. Schedule power on/off – you can set the hour to power on/off the phone.
3. Language – you can choose your preferred language.
4. Preferred input methods – you can set the preferred input method used for writing messages or editing characters.
5. Display – you can set Wallpaper, Screensaver, Power on/off display, Show date and time, Clock type, Idle Shortcut menu.
6. Theme – you can choose one of the two preset themes.
7. Greeting text – you can set the greeting text to appear on power on the phone.
8. Shortcuts – you can set shortcut functions.
9. Autoupdate of date and time – you can set to autoupdate time and date.
10. UART settings – select the SIM card for UART settings.
11. Misc. settings – you can set the LCD backlight, sensitivity for track pad and Sound effects.

Network settings

You can set the network search type (manual or automatic), preferred networks for SIM 1 /SIM 2, automatic selection for 2G or 3G network.

Security settings

PIN code

You can start up, shut down or modify PIN code. Correct PIN code shall be input when you unlock or shut down PIN code. If PIN code

English

verification is started up, each time when you switch on your phone, you will have to input PIN code. If you input mistaken PIN codes three times in a row, SIM card will be locked. You will have to get PUK1 code to unlock it. Please contact network operator to get PUK1 code when necessary.

PIN2 code

You can review PIN2 code. For details, please contact network operator.

Privacy Protection

You can review privacy protection password. Besides, you can also set passwords for some menus, in this way, you will have to input password each time when you desire to open the menus. The default password of privacy protection mode is 1122.

Automatic keypad lock

Start up the function, when the phone is in any mode and without being touched, it will automatically lock the keypad. To unlock the keypad, press Meny Key then Aa Key (left).

Change password

You can use for changing the password to lock your phone.

Anti-Thief

After entering the password of Anti-Thief, you can change the status and settings.

Status: On/off this function by left function key.

Settings: enter to the Settings, user need to input the following informations:

Anti-Thief Password:

Bonding Phone:

Preset Content: the default is :This number is using your phone.

User also can edit the preset content.

After changing SIM card, if user input wrong mobile tracker Password for only once, phone will send a message to specified number. The phone password is "1122" by default.

Connectivity

You can set and access active data connection for that moment. (WIFI, Bluetooth, Data account).

English

WIFI

You can connect to a wireless network and navigate on the internet. In this menu you can access Connect, Add, Edit, Delete, Change priority, Status, Disable, Refresh.

Bluetooth

You can use to set up the parameters for starting a Bluetooth connection.

Power on/off Bluetooth

You can choose to power on/off Bluetooth.

Device visible

You can choose "visible" or "invisible" Bluetooth. If the Bluetooth is invisible, others cannot search your phone.

My device

You can review all the discovered devices to search for a new device. Select one device and press Menu. You can connect with this device, rename the device, delete the device, delete all devices and show services list.

Paired device

You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).

File share settings

Rights of shared directory: You can choose "free access" or "read only".

Select directory: You can choose folder in the phone memory as the storage position of received files by Bluetooth.

My phone's name

You can change the name of the phone.

Note: for safety reason, when you connect to another Bluetooth device you need to insert a password, please insert the same password as the other device.

Data account

In this menu you can choose your data account for the WAP or HTTP connection that you have and also you can create a new data account.

For creating a new data account, you need to ask your provider the

English

network settings. You can access WAP and HTTP sites and use WAP services by using your mobile phone. For more details please contact your provider.

Setting a profile for internet

Setting data account:

1. Select **Menu (Options)** then select **Phone settings, Connectivity, Data Account**.
2. Select your network provider from the list. Select **Menu (Edit)** or **OK** and **Edit** to access the parameters.
3. Set the data account with the parameters your provider supplied you.
4. Select **Menu (OK)** then select **OK** to **Save** or **Back Key (No)** to leave this menu without saving.

Restore factory settings

Restore factory settings: You can restore part of the phone settings as factory settings.

The default code of restoring factory settings is: 1122.

Multimedia

Camera

Your phone have a photo camera that will help you to take pictures and save it in the phone memory or memory card.

To access camera, press Menu / Multimedia / Camera or just press Aa right Key from main menu. Press OK to take a photo, press Back Key to return to main menu or Menu Key to access next functions:

1. Switch to: select Camera or HD recording
2. Capture mode: you can choose one picture or multi pictures
3. Image size: select the photo size (VGA, 1M, M, 3.2M)
4. Self timer: set to snapshot or timer
5. White balance: you can set automatic, incandescent, fluorescent, sunny or cloudy
6. Effects: set to normal, black&white, red, green, blue, yellow
7. Advanced: set picture quality, shutter sound, antiflicker effect and factory settings.

HD video recording

When you access this function, you can record movie in HD format. To access this function press Menu / Multimedia / Camera or just press Aa right Key from main menu. Press Menu Key to access Camera menu then select HD recording. Press OK to start recording, press Back Key to cancel or Menu Key to access settings menu:

1. Switch to: select HD recording or Camera
2. Scene mode: you can choose to normal mode or night mode
3. Record size: select recording size (320x240, 640x480, 720x480)
4. White balance: you can set automatic, incandescent, fluorescent, sunny or cloudy
5. Effects: set different effects for recording
6. Record limit: set the length of recording
7. Advanced: set video quality, recording sound on/off, antiflicker effect and factory settings.

Image viewer

1. Select Menu > Multimedia > Image viewer.
2. Press Menu key (**Options**) and select view, browse style, use as and so on.

English

Audio player

1. Select Menu > Audio player
2. Press Menu key (**list**) and select refresh list, settings.
Access the Music Player interface and adjust the Play and Pause of the music by the OK key. Press number key 4 or 6 to choose the previous/next audio file; Press side key to adjust the volume.
3. Press Back key (**Back**) to return to the main menu.

Video player

1. Select Menu > Video player
2. Press Menu key (**list**) and select refresh list, settings.
Access the Video Player interface and adjust the Play and Pause of the video by the OK key. Press side key to adjust the volume.
3. Press Back key (**Back**) to return to the main menu.

FM radio

The headset cable suggest connect to the handset as antenna while playing FM.

1. Connect a compatible headset to the phone.
2. Select Menu > Multimedia > FM Radio to activate the FM radio.
After loading, the phone plays a program.
3. On the FM Radio screen, you can do as follows:
Press side key to adjust the volume.
Press Trackpad key to tune by 0.1 MHz.
4. Press Menu key (**Options**) and select Channel list, Auto Search, Settings and so on.

Sound recorder

1. Select Menu > Multimedia > Sound Recorder.
2. Press Menu key (**Options**) and select Record.
During the recording process, press OK key to pause/continue.
3. Press Back key (**Stop**) to stop recording.

File manager

You can check the specific content and service condition of the phone memory via this function. Meanwhile, you can format memory, too. Choose one folder and press left soft key, then you can operate as follows:

Create new folder: Create a new folder.

Delete: Delete the folder.

Details: Check details of the folder, name, date, size, position, etc.

Organizer

Task

To add a schedule to a special day. If there is no task, you can press <Add> to add a task and fill the content according requirements.

Highlight one task and press **Options**, you can choose

View – to view the detail of current task

Add – to add a new task

Edit – to edit current task content

Delete – to delete current task

Delete all – to delete all tasks

Send vCalendar – to send current task as vCalendar via SMS, MMS, Bluetooth or save to file

Calculator

The function will make your device a calculator with which you can carry out simple math calculation.

Calendar

Show the calendar according to the date of mobile phone. Press **Option**, you can choose

View – to view current day's tasks list. You can also add a new task.

View all – to view all current day's tasks list. You can also add a new task.

Add event – to add a new task.

Delete event – to delete the selected task.

Jump to date – to jump to the date you input.

Jump to today – to jump to today's screen.

Go to weekly view – to switch the calendar view mode.

E-book

You can read e-book with txt format with the aid of this function.

In e-book list interface, press left soft key, you can do the following.

Details: View the details, name, size, storage place, pages and bookmarks of e-book.

Alarm

There are 5 alarms can be used. For every alarm, press **Edit** you can set: Status (on or off), Time, Repeat status (when it is "Days", can also

English

set the weekday), Audio (ring tone), Snooze duration (the default duration is 4 minutes) and alert type.

World clock

You can view the time of different location. If you travel to a country or city with different time zone, you can move the time zone graph to the country or city in world map, and you can find the local time then.

Synchronization

You can sync phonebook, calendar, task between phone and internet server.

You have to create an account first on an internet sincronization server. When you registered successful ,you can use the ID and password for sync.

Sync account settings:

1. Account name: you can change it.
2. Transport type: you can choose http or wap.
3. Server settings: input server address, for example :
4. Applications to sync : you can choose phonebook, calendar, tasks.
5. Database settings: For Phonebook, Calendar and Tasks database you have to check your sunc server. Above all user name and password are empty.
6. Connection settings: You can choose SIM1, SIM2, WIFI
Different operator must set correct data account, some operator use proxy , you must input correct proxy IP.
After made all the setting you can start siconization between phone and server.

Services

STK

To show all the service inside in your SIM card, the name and service should be different according to your SIM card and OPERATOR

Internet service

This service is support by OPERATOR, if you do NOT know whether

English

your SIM card supports, please connect with the OPERATOR for more information.

Enter this service menu, you can choose

Homepage – to enter the homepage via WAP web.

Bookmarks – to list all the book marks, you can edit them or enter the bookmark directly; add new bookmarks.

Recent pages – to view recent viewed websites and enter them directly.

Input address – to input the address and enter directly

Settings – to set the WAP parameters, including SIM Cards selection, Profile you want to use, browser settings, service message settings, and to clear cache and cookies.

English

WAP

You can access WAP sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe the corresponding service from the service provider and set the relevant parameters on your phone first.

For details about the service and the charges, contact your service provider.

Setting the connection profile

Setup the data account:

1. Select "Menu > Services > Data Account".
2. Select your service provider from list. Press Menu key (**Edit**) or OK key to open.
3. Setup the data account with the information provide by your service provider.
4. Press Menu (**Done**, pop-up message to preserve).
5. Press Menu key **Yes** to save press Back key **No** to exit.

Setting the WAP

1. Select Menu > Services > Insert service > Settings, and select Edit account.
2. Select your profile.

Connecting to the Network

You can browse WAP pages on your phone after setting the connection profile and WAP parameters.

1. Select "Menu > Services > Insert service".
 2. Select Input Address and press Menu key (**OK**).
 3. Input a WAP site address.
 4. Press Menu key (**Options**) and select Done.
- The browser will display the corresponding WAP page.

English

User profile

There are 6 profiles for you to select one as current profile:

- General
- Meeting
- Outdoor
- Indoor
- Silent
- Headset
- Bluetooth

In every profile item, press **OK** to enter "Activate" and "Customize".

In "Customize", you can choose

Tone setup – to customize the tone of SIM Card 1 / SIM Card 2 incoming call, Power on / Power Off, SIM Card 1 / SIM Card 2 message, keypad tone, there is a list for you to choose.

Volume – to set the volume for ring tone and keypad tone.

Alert type – to select one type from ring, vibrate only, vibrate and ring or vibrate then ring.

Ring type – to set the type from Single (only once), repeat to Ascending.

Extra tone – to enable warning, error, camp on, and connect tone. If one of them is marked, the associated information will cause a sound.

Java applications

Installing applications

1. Press Menu key, and then select File manager, select installation files have the extension .jar or .jad
2. Press Menu key (**Options**) and then select Install and follow the instructions in the phone.
3. Select Phone or Memory card to install
4. The application will be installed in Java folder.

Removing applications

1. Press Menu key, and then select **Games > Java**.
2. Press Menu key (**Options**) and then select Delete, confirm with Yes.

Java

You can install the third-part application into your phone use Java resource file, also the phone is built-in several Java applications.

Java settings:

Card settings: select Sim card where you like to load Java applications

Sound settings: turn on/off sound for Java

Vibrate: turn on/off vibratings for Java

Save: you can choose to save on phone or card memory

Account: select the account you want to go online

Ebuddy

eBuddy is your online messenger for MSN, Yahoo, Facebook, ICQ, MySpace and AIM (AOL). Whether you're at home, school, work or traveling, with eBuddy you can chat online everywhere anytime. eBuddy is available as a mobile version. eBuddy provides instant messaging on every mobile phone.

Snaptu

Using Snaptu you do not only access the socialize web sites like Facebook, Twitter or Google Talk, but also you can access weather forecast, images on Flickr, notices on Google Calendar, Picasa and even games like Sodoku, Trivia and a lot of news.

English

Bolt

Internet Browser BOLT offers the biggest page loading speed, being the only J2ME browser that supports video streaming from media sharing websites.

BOLT browser is compatible with most mobile phones and is built on a Webkit architecture which provides the best web pages viewing. BOLT interface is friendly use, and can be used on both high-end and low-end devices.


Allview store

You can connect to our application market and download free games and applications for your Allview mobile phone from there.

Input method


Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen.

You can press  to change the text input mode.

Indicator	Text Input Mode
abc	Traditional input mode
123	Number input mode

Note: Press Back key (Clear) once to delete the last entered character. Press and hold Back key (Clear) for about 3s to clear all the entered characters at a time.

In any text input mode (except the "123" mode), press  to enter a space.

Entering (ABC and abc)

In the "ABC" or "abc" input mode, you can press a key labeled the desired letters .

Entering Numbers


In the "123" input mode, press a key labeled the desired number. In the "ABC" or "abc" input mode, press alt key then input a number.

Entering Symbols


To any input modes, press Symbol key to display a symbol list.

FAQ

These lists just for reference, if your problems can NOT be resolved according them, please contact with the local distributor.

Question	Reason and Solution
Can NOT power on	<input checked="" type="checkbox"/> Must long press the  key at least 3 seconds.
	<input checked="" type="checkbox"/> Check the battery is installed correctly.

English

	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Whether the battery runs out, charge it and wait a few minutes
Can NOT connect the network	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> The strength of signal is weak, please move to other place where the signal is stronger. <input checked="" type="checkbox"/> Maybe you are out of the service area of your network operator. <input checked="" type="checkbox"/> Check whether your SIM card is valid.
There are some popup messages	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Check whether the SIM Card is inserted correctly. <input checked="" type="checkbox"/> The mobile phone is locked, you must input the password. <input checked="" type="checkbox"/> The PIN code is needed if your SIM card is locked by you or some others. <input checked="" type="checkbox"/> The PUK code is needed when you input wrong PIN code 3 times continuously, input the correct PUK code or contact with your network operator.
The voice quality is NOT good during call	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Check whether the volume is suitable. <input checked="" type="checkbox"/> Check the signal strength in signal indicator. If the level is low, you should move to another place where the level is high. <input checked="" type="checkbox"/> The time is the call rush hour, the network can not carry so many calls.
The standby time of battery becomes short	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> The low signal strength will shorten your battery standby time. <input checked="" type="checkbox"/> The battery runs out its life, please change the battery.
SIM card error	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> SIM card connect point is dirty, please clean it with soft and dry cloth or something. <input checked="" type="checkbox"/> SIM card is NOT inserted correctly. <input checked="" type="checkbox"/> SIM card is broken, please contact with your network operator.
Can NOT make a call	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Make sure you press  after dialing numbers. <input checked="" type="checkbox"/> Make sure you have enough money associated with your SIM card.

English

	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Make sure your SIM card is valid. <input checked="" type="checkbox"/> Check whether the dialing out function is barred in call settings. <input checked="" type="checkbox"/> Check whether the FDN is set in call settings.
<p>Can NOT be called by others</p>	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Make sure your mobile phone is ON, and the network is connected. <input checked="" type="checkbox"/> Make sure there is enough money associated with your SIM card. <input checked="" type="checkbox"/> Make sure your SIM card is valid. <input checked="" type="checkbox"/> Check whether the incoming call is barred in Call Settings. <input checked="" type="checkbox"/> Check whether the caller number is in black list.
<p>Can NOT charge the battery</p>	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Check the connector connects well. <input checked="" type="checkbox"/> Check the temperature is suitable. <input checked="" type="checkbox"/> Battery or charger is damaged, please change a new one.
<p>Some functions do NOT work</p>	<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Check the operation is correct <input checked="" type="checkbox"/> Make sure the operation is support by your network operator or your SIM card. <input checked="" type="checkbox"/> Make sure the condition needed by this function is meted.

English

DECLARATION OF CONFORMITY

Nr.

We, SC VISUAL FAN SRL, importer located in Brasov, 16 Liliacului STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.5 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that:

The product Q1 GET – mobile phone ALLVIEW brand- and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;
- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 61000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;
- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303).

The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;
- Safety EN 6095-1;
- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.
Also available on web:"<http://allview.ro>"

CE 1313

SAR value: 1.22 W/kg

Brasov

20.08.2010

